


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Features

- ❑ Sinusoidal motor phases commutation
- ❑ Motors supported:
  - Panasonic A and S series motors
  - Rotary or Linear Brushless motors
  - Motors with index coded commutation
- ❑ Up to 20A peak / 12A continuous output current
- ❑ Up to 200V DC power supply
- ❑ Path point buffer for coordinated motion control at 30/60/120 Hz point rate
- ❑ Absolute and relative position modes
- ❑ 32-bit position, velocity, acceleration, 16-bit PID filter gain values
- ❑ Feedback loss protection
- ❑ Comprehensive motor output short-circuit protection:
  - Output to output
  - Output to ground
- ❑ Adjustable motor current and overload time limits
- ❑ Over/under voltage shutdown
- ❑ Overheating protection
- ❑ Hardware Emergency stop input
- ❑ Forward and reverse over travel inputs
- ❑ Communication speed 19.2 - 115.2 KBps
- ❑ Servo rate 2 kHz
- ❑ PWM frequency 20 kHz
- ❑ Encoder rate 3.5MHz

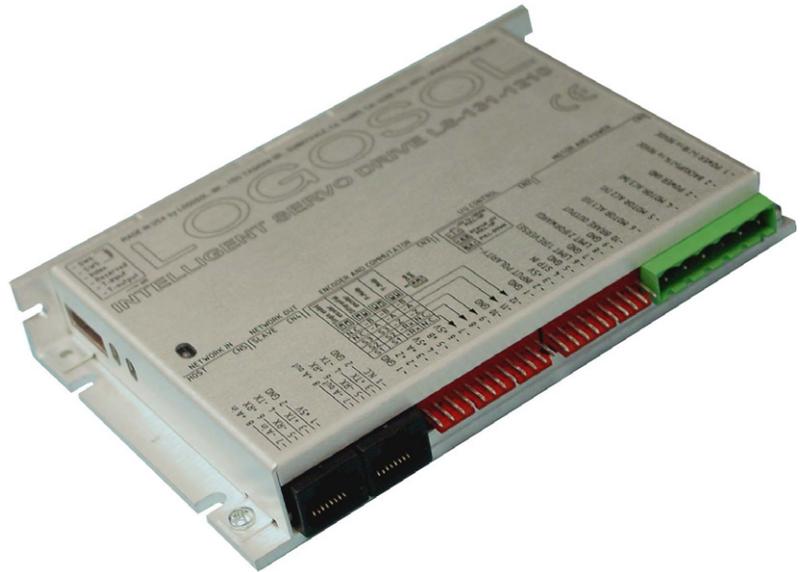

## Description

LS-131 is all digital single-axis servo controller with integrated power amplifier designed for applications requiring sinusoidal control of Rotary or Linear brushless motors up to 1.5 HP.

LS-131 supports coordinated motion of several motors. The drive is a member of Logosol's distributed motion control network. Up to 31 LDCN devices can be controlled over a multi-drop full duplex RS-485 network. Standard RJ-45 connectors and commercially available cables are used for daisy chaining of the modules.

LS-131 is equipped with various safety features such as short circuit protection for the motor and the drive, limit switch inputs, hardware stop input, over/under voltage shutdown and encoder presence control. The maximum motor output current and overload time can be set.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004


## TECHNICAL SPECIFICATIONS rated at 25°C ambient, POWER (+)=60VDC, Load=250μH motor

<b>MAIN POWER (+)</b> LS-131-620 LS-131-1210 LS-131-1215 LS-131-2010	18 to 180 VDC, 200V Absolute Maximum 18 to 90 VDC, 100V Absolute Maximum 18 to 140 VDC, 150V Absolute Maximum 18 to 90 VDC, 100V Absolute Maximum
<b>BACKUP POWER (+)</b> LS-131-620 LS-131-1210 LS-131-1215 LS-131-2010	14 to 180 VDC, 200V Absolute Maximum 14 to 90 VDC, 100V Absolute Maximum 14 to 140 VDC, 150V Absolute Maximum 14 to 90 VDC, 100V Absolute Maximum
<b>BACKUP CURRENT</b>	150mA max at 24V 60mA max at 60V 30mA max at 150V
<b>MAX MOTOR OUTPUT CURRENT</b> Peak LS-131-620 LS-131-1210, LS-131-1215 LS-131-2010 Continuous LS-131-620 LS-131-1210, LS-131-1215 LS-131-2010	6A 12A 20A 4A 8A 12A
<b>MIN LOAD INDUCTANCE</b>	200μH
<b>PWM SWITCHING FREQUENCY</b>	19.5KHz
<b>SERVO RATE</b>	0.512 msec
<b>SERIAL BAUD RATE</b>	19.2 – 115.2 Kbps
<b>OPEN COLLECTOR BRAKE OUTPUT</b> Max voltage applied to output Max current load	48V 0.4A
<b>DIGITAL INPUTS</b> Encoder & Commutation Forward limit, Reverse limit, STP IN, Input Polarity	HI=3.5V, LO=1.5V, 2K2 pull-up resistors LOMin=-0.5V<LO< 1.5V; 3.5V<HI<HImax=30V; Imax=8mA
<b>ENCODER</b>	Quadrature with index and Panasonic encoder mode
<b>HALL SENSORS</b>	60/120°
<b>LED</b> ORANGE GREEN	Overcurrent, Motor Fault, Encoder error, STP IN activated Drive OK
<b>PROTECTION</b> Short circuit Over temperature shut off	Motor output to motor output, Motor output to GND Activated at 80°C
<b>POWER DESSIPATION (max)</b>	35W
<b>THERMAL REQUIREMENTS</b> Storage temperature range Operating temperature range	-30 to +85 °C 0 to 45 °C
<b>MECHANICAL</b> Size Weight	5.5 x 3.5 x 0.85" in 0.65 lb. (0.3 kg)
<b>+5V SOURCE</b> Max output current	200mA for all three output pins combined
<b>MATING CONNECTORS</b> MOTOR AND POWER ENCODER AND COMUTATOR INPUT I/O CONTROL	<b>RECOMMENDED CONNECTOR TYPE</b> Magnum EM2565-06-H or Phoenix: MSTB 2.5/6-ST-5.08 Molex: 22-01-3127 housing with 08-50-0114 pins (12pcs) Molex: 22-01-3107 housing with 08-50-0114 pins (10pcs)


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## DIMENSIONAL DRAWING

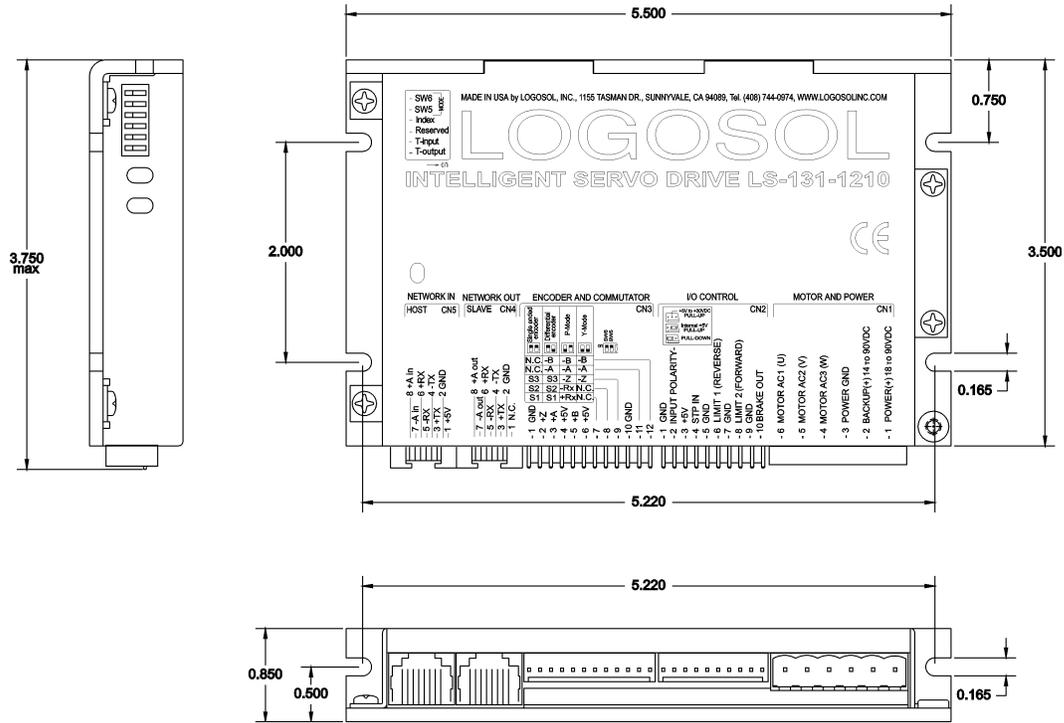

## SERVO DRIVE LAYOUT

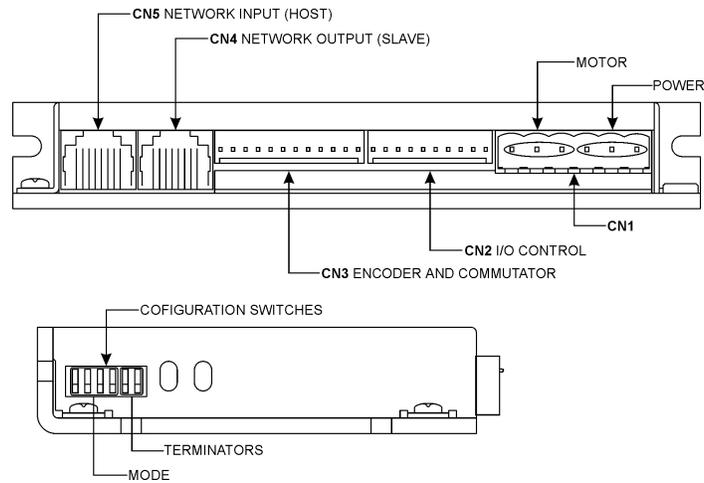


## ORDERING GUIDE

PART NUMBER	MODEL	DESCRIPTION
912131002	LS-131-620	Intelligent Servo Drive 6A/180V
912121004	LS-131-1215	Intelligent Servo Drive 12A/140V
912131001	LS-131-1210	Intelligent Servo Drive 12A/90V
912131003	LS-131-2010	Intelligent Servo Drive 20A/90V
230601037	LS-131-CN	Mating connector kit for LS-131
230601017	PAN-AS-CN	Mating connector kit for Panasonic A and S series motors

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## CONNECTORS AND PINOUT

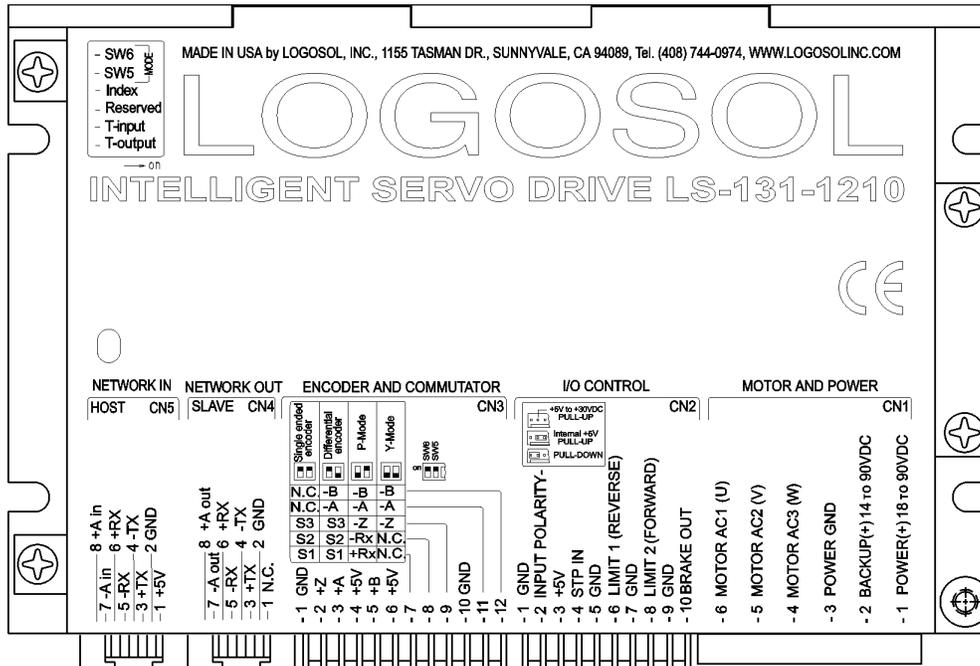

## DIP SWITCHES

SW	NAME	DESCRIPTION
1	T-output	Transmit line terminator
2	T-input	Receive line terminator
3	Reserved	Not used
4	Index	Commutation Reference: ON=Encoder Index, OFF=Hall data
5	SW5	SW6=ON, SW5=ON - Motor with single ended (non differential) encoder SW6=ON, SW5=OFF - Motor with differential encoder
6	SW6	SW6=OFF, SW5=ON, - Panasonic A or S series motor (P-mode) SW6=OFF, SW5=OFF - Motors with index coded commutation (Y-mode)

## CN1 – POWER AND MOTOR CONNECTOR

PIN	SIGNAL	DESCRIPTION
1	POWER (+)	Power supply, positive terminal
2	BACKUP (+)	Backup Power supply, positive terminal
3	POWER GND*	Power supply ground
4	MOTOR AC3 (W)	Output to motor Phase 3 terminal for brushless motor Phase W for Panasonic A and S series motors and motors with index coded commutation
5	MOTOR AC2 (V)	Output to motor Phase 2 terminal for brushless motor Phase V for Panasonic A and S series motors and motors with index coded commutation
6	MOTOR AC1 (U)	Output to motor Phase 1 terminal for brushless motor Phase U for Panasonic A and S series motors and motors with index coded commutation

\* POWER GND and GND are electrically connected. Drive Case is isolated from drive circuitry and should be grounded externally.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## CN2 – I/O CONTROL

PIN	SIGNAL	DESCRIPTION
1	GND	Signal ground
2	INPUT POLARITY	Inputs polarity select - must be connected to GND, to +5V, or to other positive source with voltage up to 30V
3	+5V	Power supply output
4	STP IN	Stop input (disables servo amplifier)
5	GND*	Signal ground
6	LIMIT 1 (REVERSE)	Over travel input
7	GND*	Signal ground
8	LIMIT 2 (FORWARD)	Over travel input.
9	GND*	Signal ground
10	BRAKE OUT	Brake output. Open collector output 48V/0.4A

## CN3 – ENCODER AND COMMUTATOR

PIN	SIGNAL	DESCRIPTION
1	GND*	Encoder ground
2	+Z	Encoder index
3	+A	Encoder phase A
4	+5V**	Encoder power supply
5	+B	Encoder phase B
6	+5V**	Commutator power supply
7	S1 +RX	Hall input #1 for Hall mode Hall data for Panasonic A and S series motors Not connected for motors with index coded commutation
8	S2 -RX	Hall input #2 for Hall mode Hall data for Panasonic A and S series motors Not connected for motors with index coded commutation
9	S3 -Z	Hall input #3 Encoder phase (-) Z for Panasonic A and S series motors and motors with index coded commutation
10	GND*	Commutator ground
11	-A	Encoder phase (-) A for motors with differential encoders
12	-B	Encoder phase (-) B for motors with differential encoders

## CN4 – NETWORK OUT (SLAVE)

PIN	SIGNAL	DESCRIPTION
1	N.C.	Not connected
2	GND*	Interface ground
3	+TX	(+) Transmit data
4	-TX	(-) Transmit data
5	-RX	(-) Receive data
6	+RX	(+) Receive data
7	-A out	(-) Address output
8	+A out	(+) Address output

## CN5 – NETWORK IN (HOST)

PIN	SIGNAL	DESCRIPTION
1	+5V**	RS-232 adapter power supply
2	GND*	Interface ground
3	+TX	(+) Transmit data
4	-TX	(-) Transmit data
5	-RX	(-) Receive data
6	+RX	(+) Receive data
7	-A in	(-) Address input
8	+A in	(+) Address input


\* POWER GND and GND are electrically connected. Drive Case is isolated from drive circuitry and should be grounded externally.

\*\* 200mA Max current for all three outputs combined.


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## SAMPLE APPLICATION using AC (brushless) motor with single ended encoder

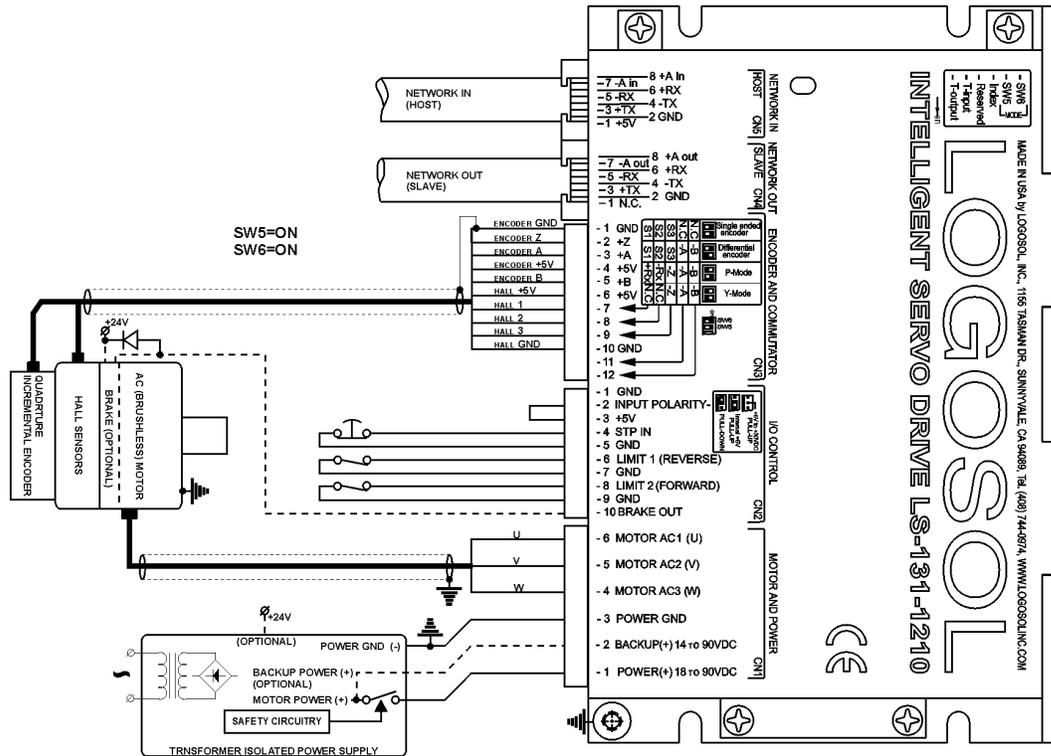


## SAMPLE APPLICATION using AC (brushless) motor with differential encoder

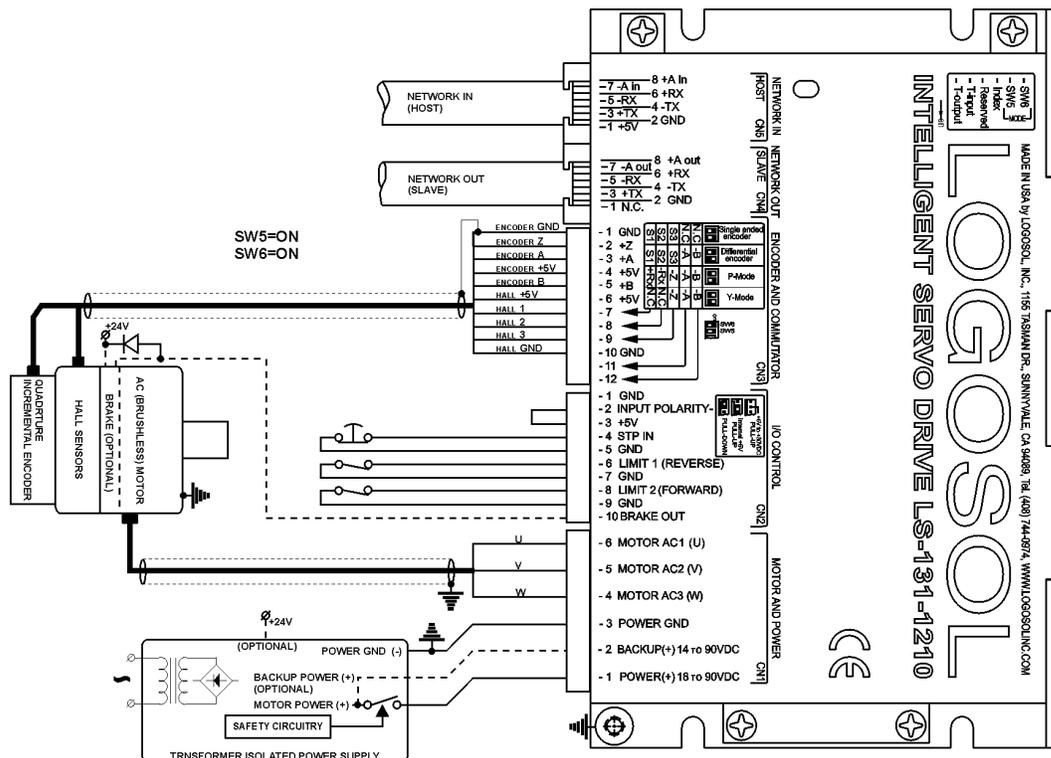


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## SAMPLE APPLICATION using P-mode

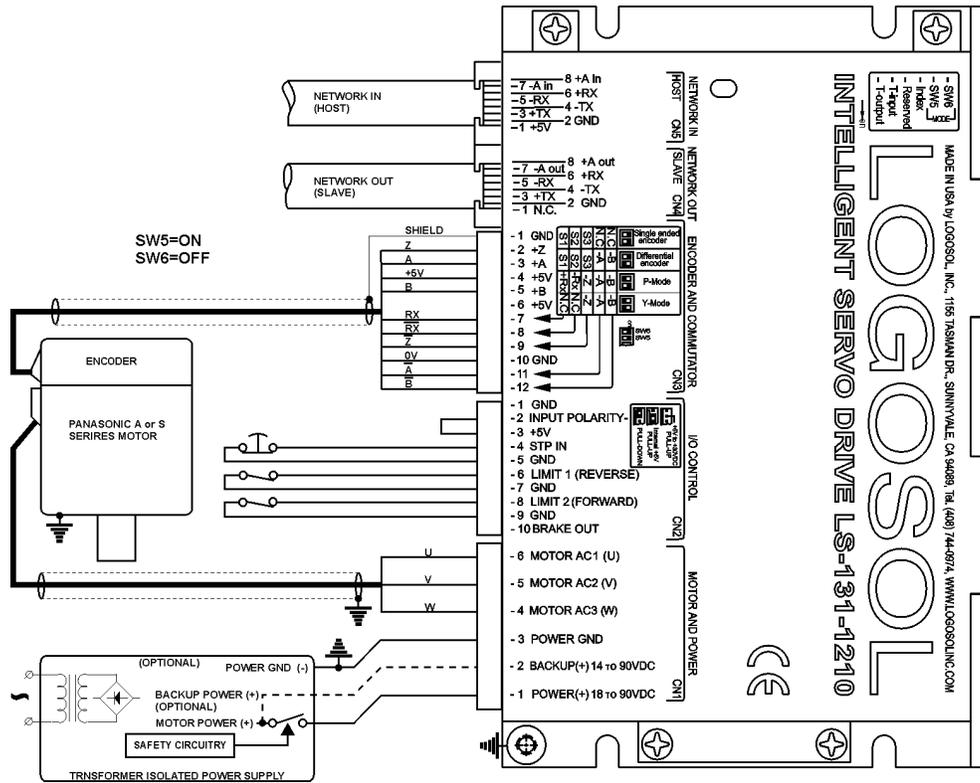


## SAMPLE APPLICATION using Y-mode

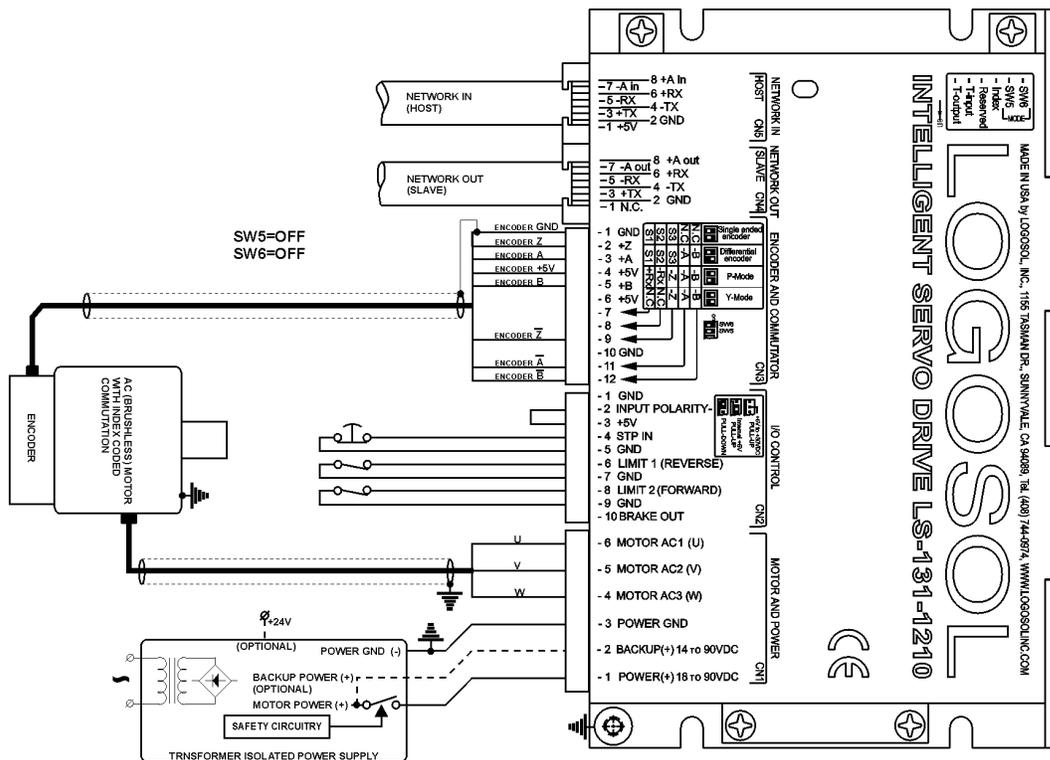


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## SAMPLE APPLICATION I/O control

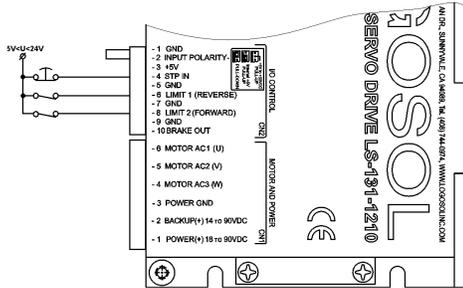


Active HIGH control inputs

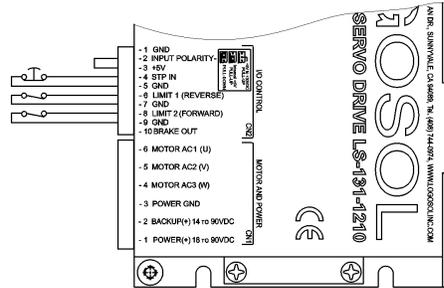

Active LOW control inputs

## PANASONIC A AND S SERIES MOTORS wiring diagram

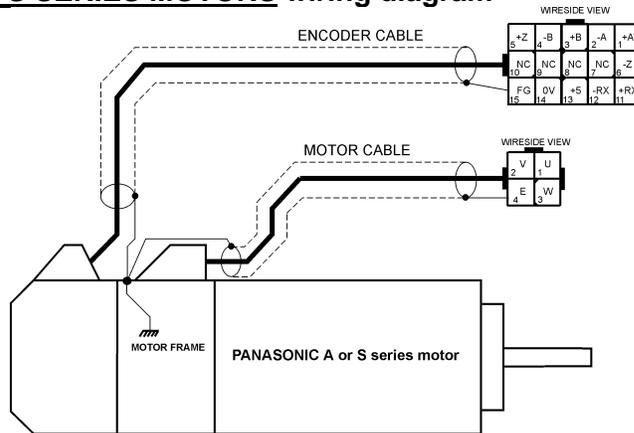


ENCODER CONNECTOR		
PIN#	SIGNAL NAME	WIRE COLOR
1	+ A channel output	Red
2	- A channel output	Pink
3	+ B channel output	Green
4	- B channel output	Blue
5	+ Z channel output	Yellow
6	- Z channel output	Orange
7	NC	NA
8	NC	NA
9	NC	NA
10	NC	NA
11	+RX	Light blue
12	-RX	Purple
13	+5V	White
14	0V	Black
15	FG = motor frame	Black

MOTOR CONNECTOR		
PIN#	SIGNAL NAME	WIRE COLOR
1	U phase	Red
2	V phase	White
3	W phase	Black
4	E = motor frame	Green/yellow


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## EXTENSION CABLES for PANASONIC A and S series motors

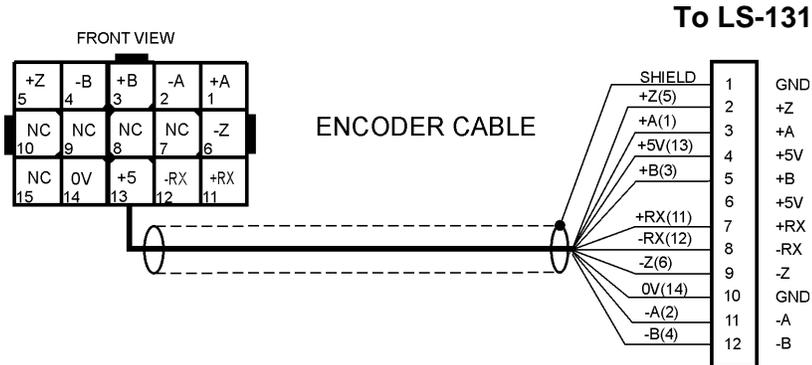

MOTOR CONNECTOR (AMP CAP 172163-1) 10 pins 170365-1		LS-131 CONNECTOR (MOLEX 22-01-3127) 11 pins 08-50-0114	
PIN#	SIGNAL NAME	PIN#	SIGNAL NAME
1	+ A channel output	3	+A
2	- A channel output	11	-A
3	+ B channel output	5	+B
4	- B channel output	12	-B
5	+ Z channel output	2	+Z
6	- Z channel output	9	-Z
11	+RX	7	+RX
12	-RX	8	-RX
13	+5V	4	+5V
14	0V	10	GND
NA	NA	1	GND (SHIELD)

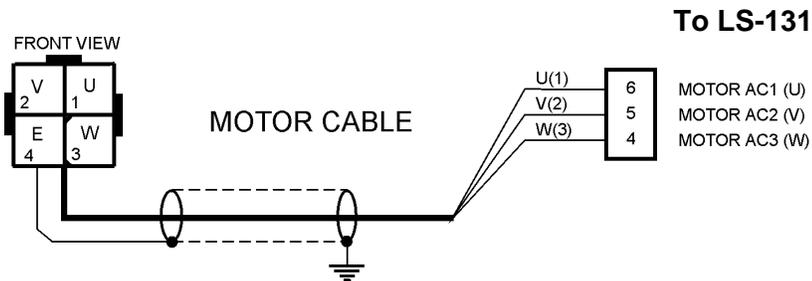

MOTOR CONNECTOR (AMP CAP 172159-1) 4 pins 170366-1		LS-131 CONNECTOR (PHOENIX CONTACT MSTB2.5/4-ST-5.08)	
PIN#	SIGNAL NAME	PIN#	SIGNAL NAME
1	U phase	6	MOTOR AC1 OR DC (+)
2	V phase	5	MOTOR AC2 OR DC (-)
3	W phase	4	MOTOR AC3 OR N.C.
4	E=motor frame		≡ (SHIELD)

# Logosol Intelligent Servo Drive LS-131


Doc # 712131001 / Rev. F, 10/28/2004

## LOGOSOL LS-131 QUICK START GUIDE

1. Set DIP switches depending on motor type.
2. Connect power supply (18 to 90VDC) to LS-131
3. Connect your motor, encoder, hall sensors, and any other I/O you may have.
4. Connect RS-232 adapter and RJ-45 network cable between LS-131 and your host computer.

### Software installation

1. Insert Logosol Distributed Control Network Utility installation disk into the floppy drive.
2. Select RUN from the Windows 95/98/2000/NT/XP Start Menu.
3. Type a:\dcnsetup and then click OK (a: represents the drive letter).
4. The installation wizard will guide you through the setup process.

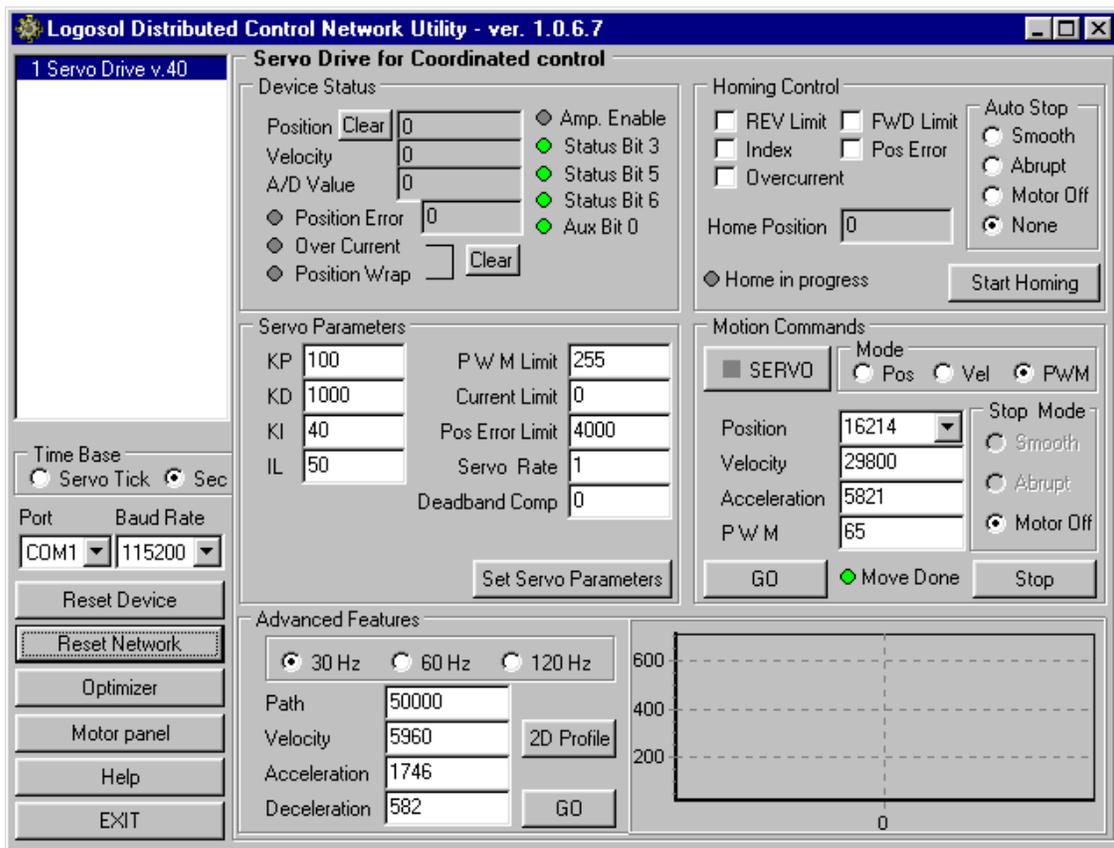

### Initial Connection to the Host

1. Turn on the power supply.
2. Run the Logosol Distributed Control Network Utility.
3. Choose the proper COM port.
4. Click "SERVO" button.
5. Click "GO" button. The motor should rotate slowly in positive direction. Click "Stop" to interrupt the motion. More information about using LDCN utility is available in LDCN Help.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Motor Initialization

1. Turn on the power supply.
2. Run the Logosol Distributed Control Network Utility.
3. Choose the proper COM port.
4. Click **Motor Panel** button.
5. Set the motor parameters.

**Peak current, Peak time** – Peak current is % of the MAX MOTOR OUTPUT CURRENT (6A for LS-131-620, 12A for LS-131-1210 and LS-131-1215, 20A for LS-131-2010). The output current will be limited to the Peak current for Time=Peak time. After that the current will be limited to the Continuous current. Peak current (%) and Peak time should be set depending on **motor and application** parameters.


**Continuous current, Overload time** – the drive output will be limited to this value for overload time. After the expiring of the Overload time the output will be disabled. If “Off” is set the drive output will not be affected. Continuous current (%) and Overload time should be set depending on **motor and application** parameters.

**Gain** – set Gain=100%. This parameter sets the ratio between command value and the drive PWM output. Gain=50% will limit the PWM output value to 1/2 of its maximum.

**Current** – motor current will be limited to this value during the **initialization procedure only**. If the current is too low the initialization procedure will not work. Higher values may damage the motor. Start with values 10%-20% and increase the current depending on the results.

**Current loop ON** – leave Current loop ON unchecked.

6. Follow the instructions on the screen.

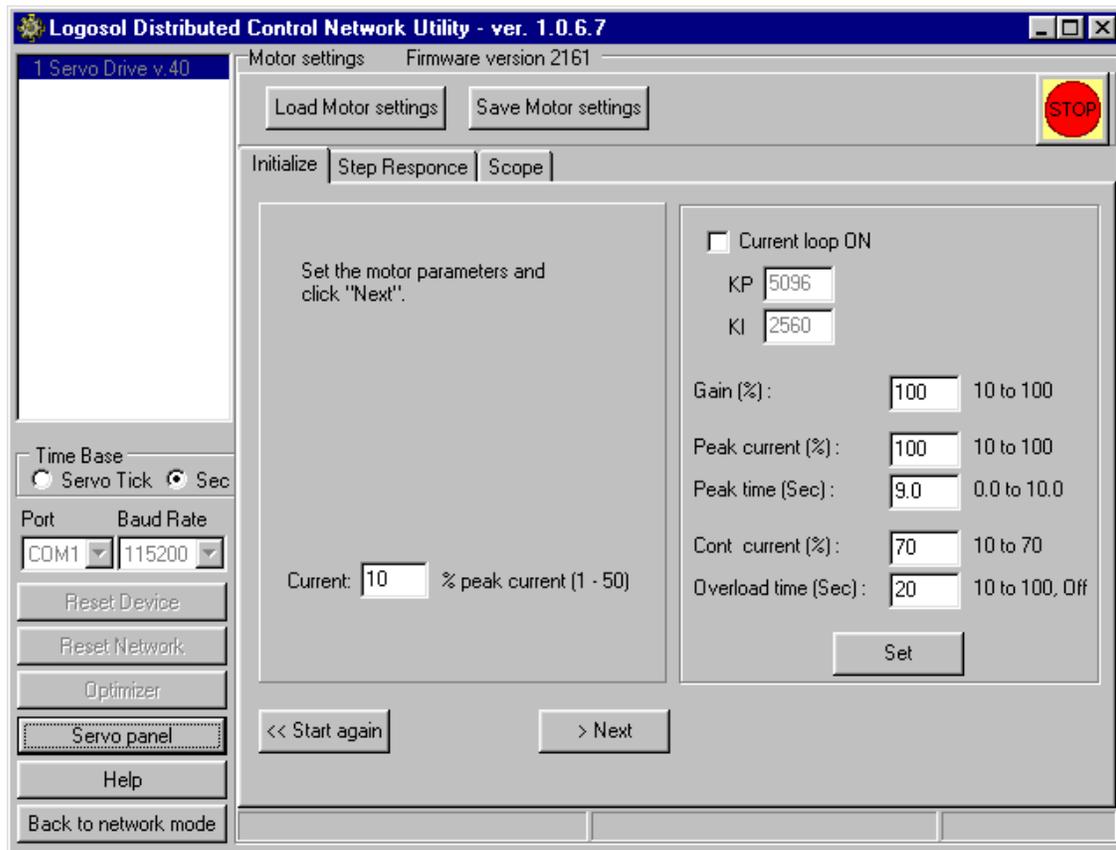


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Setting Current loop parameters

In some applications using “current loop” mode will improve the drive performance. Check “Current loop ON” box to activate this mode. To set **KP** and **KI** values select **Step Response** window. Try to get the current as close as it is possible to square wave with minimum overshooting and oscillation.

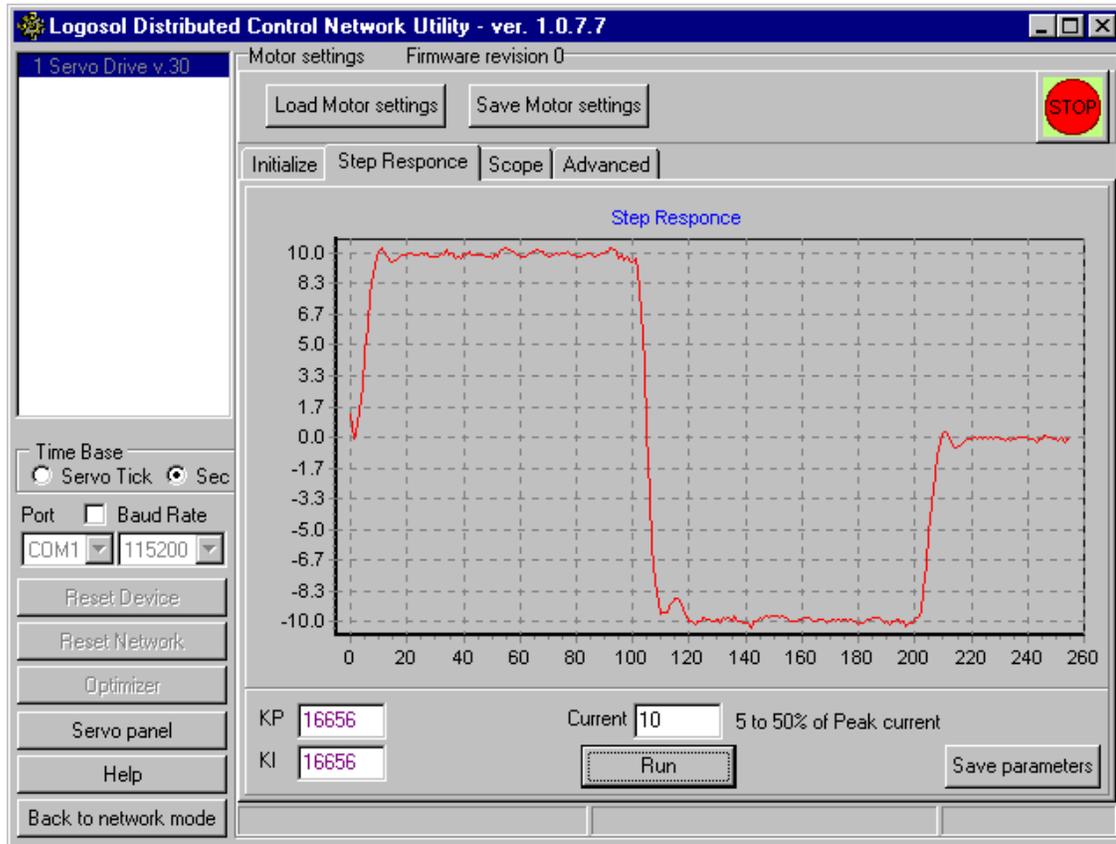


# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## LS-131 ARCHITECTURE

### Overview

LS-131 Logosol Intelligent Servo Drive is a highly integrated servo control module for Brushless motors including motion controller, servo amplifier with sinusoidal output, serial communication interface, and protection circuit. Up to 31 servo drives can be controlled over a multi-drop full duplex RS-485 network.

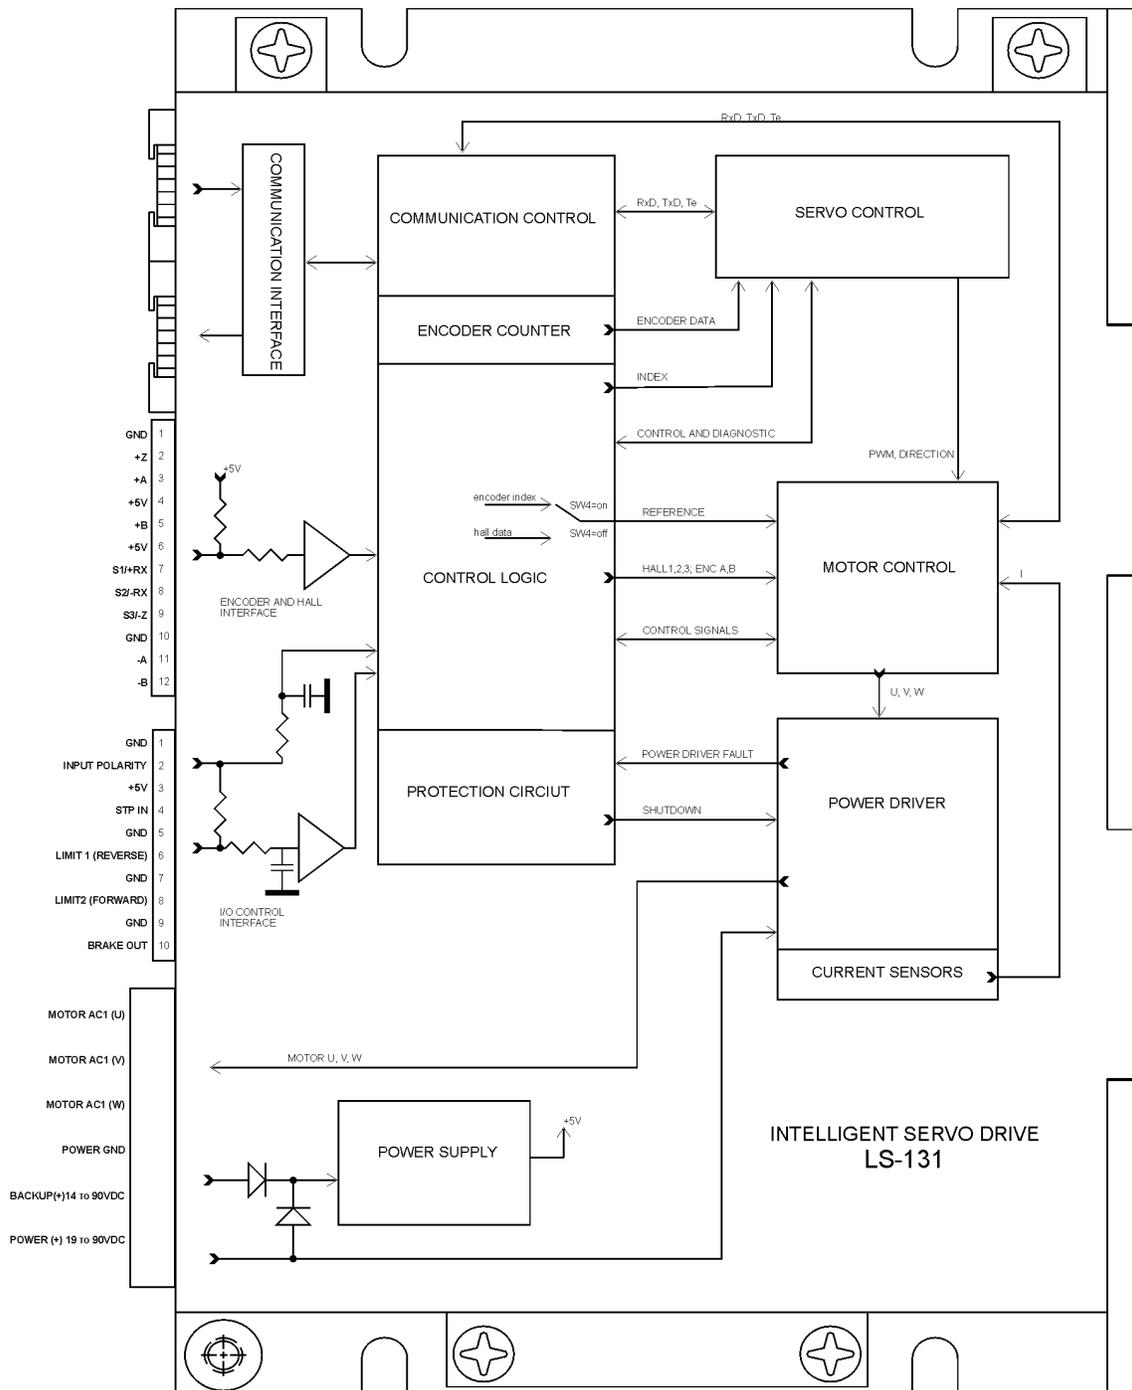

LS-131 Block diagram

# Logosol Intelligent Servo Drive LS-131


Doc # 712131001 / Rev. F, 10/28/2004

## Encoder and Commutator interface

The Encoder interface accepts two square wave inputs – +A, +B (+A, -A, +B, and -B for differential encoders) from an incremental encoder. Ideally these square waves are 50% duty cycle and +/-90 degrees out of phase. The time between encoder state transitions is limited and should not be less than 0.2uS. With ideally formed encoder pulses, this would correspond to a 2500 line encoder (10000 counts/rev) rotating at 30,000 rpm.

Encoder Index +Z (+Z and -Z for differential encoders) is used by Servo control module to capture Home position. In order to capture home position precisely the velocity during homing procedure have to guarantee index pulse longer than 512uS.

Hall sensors provide the motor position. They are used by motor control module to determinate motor position after power up and during the motor initialization procedure.

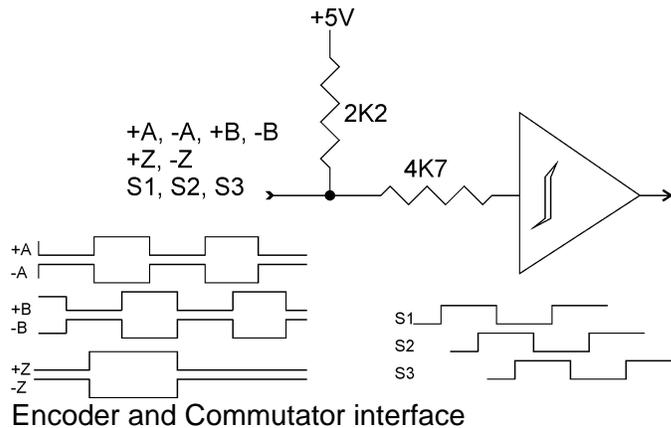


Besides the position control, encoder phases, index and hall sensors are used to determinate the motor commutation. The output PWM is synchronized every motor rotation using internal Reference signal. When the motor is equipped with commutated encoder, the Reference signal is generated from hall sensors data (DIP switch Index must be “Off”). When the motor is equipped with encoder and regular hall sensors, Encoder Index should be used (DIP switch Index must be “On”).

## I/O Control interface

**Control inputs** – STP IN, LIMIT1 (REVERSE), LIMIT2 (FORWARD). STP IN is stop input. Limit inputs may be used as “home” switches, limit switches, or general-purpose inputs. (Refer to “I/O control” and “Set homing mode” command in “Command description” section in this document).


**Input Polarity** is an input, which allows changing the control inputs active level. If Input Polarity pin is grounded, the input terminators are grounded, and the active level is a voltage between 3.5V and 30V (positive interface). If the polarity pin is connected to the drive’s +5V, or an external 5V to 30V source, the active level of the control inputs is a GND (open collector interface).

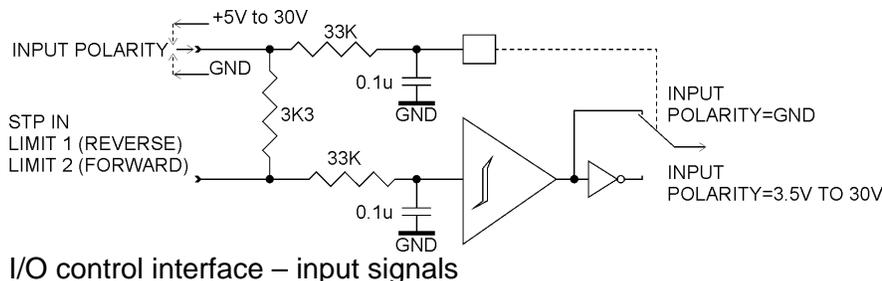

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

**Brake Out** is an open collector output. Brake will be released when the brake output is “on”. Brake will be engaged when brake output is “off”. The Brake Out state depends on Servo drive status (Refer to “*Status bits and LEDs*” section in this document).

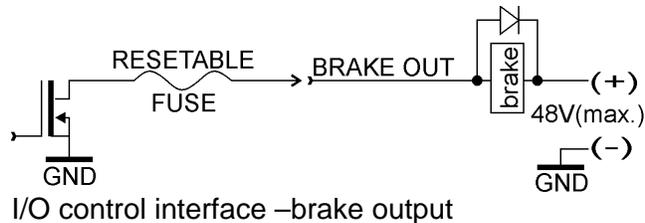

I/O control interface –brake output

## Serial Command Interface

Serial communication with the LS-131 adheres full-duplex (4 wire) 8-bit asynchronous protocol with one start bit, followed by 8 data bits (lsb first), followed by a single stop bit.

The communication protocol supports full-duplex multi drop RS-485 interface that allows multiple drives to be controlled over a single RS-485 port. The host sends commands over it's RS-485 transmit line and receives all status data over shared RS-485 receive line.

The command protocol is a strict master/slave protocol in which the host master sends a command packet to a specific slave. The data are stored in the slave buffer until the end of the servo cycle (0.512uS) and then the command is executed. Then the slave Drive sends back a status packet. Typically the host does not send another command until a status packet has been received to insure that it does not overwrite any previous command data still in use.

Each command packet consist of:

*Header byte (0xAA)*

*Address byte – individual or group (0x00 – 0xFF)*

*Command byte*

*0 – 15 data bytes*


*Checksum byte*

The command byte is divided into upper and lower nibbles: the lower nibble is the command value; the upper nibble is the number of additional data bytes, which will follow the command byte. The checksum byte is 8-bit sum of the address byte, the command byte, and the data bytes. The number of data bytes depends on the particular command chosen. After a command is issued, the corresponding drive will send back a status packet consisting of:

*Status byte*

*0-19 optional bytes of status data*

*Checksum byte*

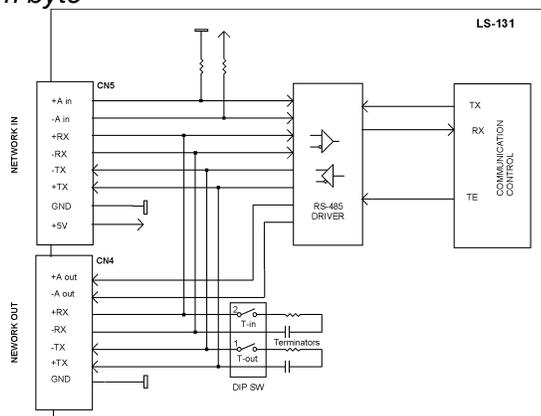

Servo Drive Serial Interface

# Logosol Intelligent Servo Drive LS-131


Doc # 712131001 / Rev. F, 10/28/2004

The status byte contains basic status information about the Drive, including a checksum error flag for the command just received. The optional data bytes may include data such as the position, velocity, etc. and are programmable by the host. The checksum byte is the 8-bit sum of the status byte and the additional status data bytes.

The transmission of all 16-bit and 32-bit data is always with the least significant byte first.

## Addressing

Rather than hard-wired or switch-selected address, the host dynamically sets the address of each LS-131 with the aid of the daisy-chained *A in* and *A out* lines. This allows additional drives to be added to a RS-485 network with no hardware changes. *A in* of the first Drive is pulled low, its communication is enabled and the default address is 0x00. When the "Set Address" command is issued to give this Drive new unique address, it will lower its *A out* pin. Connecting *A out* pin to the *A in* pin of the next servo drive in the network will enable its communication at default address of 0x00. Repeating this process allows a variable number of controllers present to be given unique addresses. In addition to the individual address, each controller has a *secondary group address*. Several Drives may share a common group address. This address is useful for sending commands, which must be performed simultaneously by a number of drivers (e.g. "Start motion", "Set Baud Rate", etc.). When a LS-131 receives a command sent to its group address, it will execute the command but not send back a status packet. This prevents data collisions on the shared response line. In programming group addresses, however, the host can specify that one member of the group is the "group leader". The group leader will send back a status packet just like it would for a command sent to its individual address. The group address is programmed at the same time as the unique individual address using the "Set Address" command.

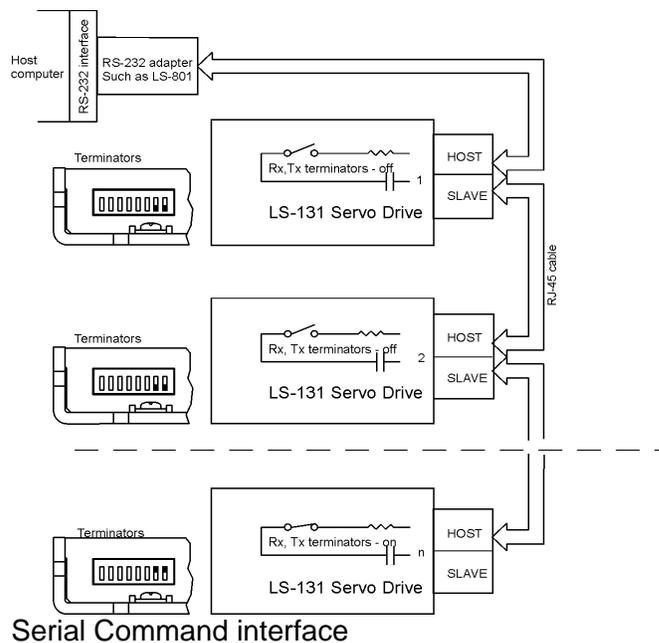

## Group Addresses

In addition to the individual address, each controller has a secondary group address. Several LS-131 controllers may share a common group address. This address is useful for sending commands, which must be performed simultaneously by a number of drivers (e.g. *Start motion*, *Set Baud Rate*, etc.). When a LS-131 receives a command sent to its group address, it will execute the command but not send back a status packet. This prevents data collisions on the shared response line. When programming group addresses, however, the host can specify that one member of the group is the "group leader". The group leader will send back a status packet just like it would for a command sent

# Logosol Intelligent Servo Drive LS-131

---

Doc # 712131001 / Rev. F, 10/28/2004

to its individual address. The group address is programmed at the same time as the unique individual address using the *Set Address* command.

## Changing communication rates

The default baud rate after power-up is 19.2Kbps. Baud rates up to 115.2Kbps may be used at maximum servo rate. After communication has been established with all servo drives on a single network, the baud rate may be changed to a higher value with the *Set Baud Rate* command.

## Servo control

LS-173P uses a “proportional-integral-derivative”, or PID filter. The PWM signal is a square wave with 51.2  $\mu$ sec period and varying duty cycle. A PWM value of 1023 corresponds to 100% and a value of 0 corresponds to 0%. Usually, PWM value greater than 1000 is not recommended. The position, velocity and acceleration are programmed as 32-bit quantities in units of encoder counts for servo ticks. For example, a velocity of one revolution per second of a motor with a 500 line encoder (2000 counts/rev) at a tick time of 0.512 msec. would correspond to a velocity of 1.0240 counts/tick. Velocities and accelerations use the lower 16 bits as a fractional component so the actual programmed velocity would be  $1.024 \times 65536$  or 67,109. An acceleration of 4 rev/sec/sec (which would bring us up to the desired speed in  $\frac{1}{4}$  sec) would be 0.0021 counts/tick/tick; with the lower 16 bits the fractional component, this would be programmed as  $0.0021 \times 65536$  or 137. Position is programmed as a straight 32-bit quantity with no fractional component. Note that if the servo rate divisor is modified, the time dependent velocity and acceleration parameters will also have to be modified.

## PWM mode

If the position servo is disabled, the motor is operated in a raw PWM output mode and no trapezoidal or velocity profiling is performed. In this mode, a user specified PWM value is outputted directly to the amplifier. A PWM value of 255 corresponds to 100% and a value of 0 corresponds to 0%. Command position is continually updated to match the actual position of the motor and there will be no abrupt jump in the motor's position when position or velocity modes are entered. Also while the position servo is disabled, the command velocity is continually updated to match the actual velocity of motor. Thus, when velocity mode is entered, there will be no discontinuity in the motor's velocity. (Trapezoidal profile motions, however, will still force the motor to begin at zero velocity).

## STATUS and SAFETY features

### Safety features

**STP IN** – must be closed to GND or +5V (depend on INPUT POLARITY input). If STP IN is open the drive will be in Fault Condition and the drive output will be disabled.

**Motor short protection** – the drive is protected against short circuit output to output, or output to ground.

**Overvoltage protection** –The drive will be in Fault Condition and the drive output will be disabled when the input voltage is above specified limits (Refer to *Technical Specifications* section of this document).

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## System Status

**Stop Motor command** - refer to *Stop motor* command (page 25):

**Bit 0** – Pic\_ae.

**Auxiliary Status byte** diagnostic bits - refer to *Read status* command (page 23) and *Status byte and Auxiliary status byte definitions* (page 29):

**Bit 0** – Index;

**Bit 2** – Servo\_on.

**Status byte** diagnostic bits - refer to *Read status* command (page 23) and *Status byte and Auxiliary status byte definitions* (page 29):

**Bit 3** – Power\_on;

**Bit 4** – Pos\_error;

**Bit 5** – Limit 1 (Reverse);

**Bit 6** – Limit 2 (Forward).

## Diagnostic bits

Status Bit 6 Limit 2	Status Bit 5 Limit 1	Status Bit 4 Pos_error	Status Bit 3 Power_on	Auxiliary Bit 2 Servo_on	Auxiliary Bit 0 Index	Stop Cmd Bit 0 Pic_ae	CONDITION	GREEN	ORANGE	BRAKE OUT
1	1	X	1	0	1	0	Servo OFF, Power Driver OFF	Blink	Off	Off
For limit	Rev limit	0*	1	1	Encoder	1	Servo ON, Power Driver ON	On	Off	On
				0			Servo OFF, Power Driver ON			
X	0	X	1	0	1	0	STOP input activated	Alternate		Off
1	0	1	0	0	1	1	STOP input activated (lathced)*			
0	X	1	0	0	1	0	Overvoltage/Overheat	Off	On	
0	1	1	0	0	1	1	Motor short/Overvoltage*			
1	1	1	0	0	1	1	Overheat*	Blink	Blink	
0	0	1	0	0	1	1	Overcurrent*			
1	0	1	0	0	0	1	Encoder error* - differential encoder	Off	Blink	
X	X	1	1	0	X	1	Position error*	On		

\*To restore the normal operation:

- Set to 0 Pic\_ae (*Stop motor* command, page 25);
- Send *Clear sticky bits* command (page 27);
- If there is no more fault condition Power\_on (*Status Byte* Bit 3, page 29) will be set to 1;
- To turn servo ON set Pic\_ae to 1 (*Stop motor* command, page 25).

## Power-up and Reset Conditions

On Power-up or reset, the following state is established:

*Motor position is reset to zero*

*Velocity and acceleration values are set to zero*

*All gain parameters and limit values are set to zero*

*The servo rate divisor is set to 1 (0.512 msec servo rate)*

*The PWM value is set to zero*

*The controller is in PWM mode*

*The default status data is the status byte only*

*The individual address is set to 0x00 and the group address to 0xFF (group leader not set)*

*Communications are disabled pending a low value of Ain*

*The baud rate is set to 19.2 KBPS*

*In the status byte, the move\_done and pos\_error flags will be set and home\_in\_progress flag will be cleared. In the auxiliary status byte, the pos\_wrap, servo\_on, accel\_done, slew\_done and servo\_overrun flags will be cleared.*

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## **THEORY OF OPERATION**

LS-131 can operate in two different modes – normal and advanced. In normal mode the command set is fully compatible with LS-173 command specification. Advanced mode is intended for coordinated motion control and includes different enhancements.

**Relative Zero Position** The position counter in the LS-131 can optionally be reset relative to the last position captured in the home position register. This relieves the user from having to calculate goal positions relative to the home position. Please refer to the *Command Specification* section below.

**Relative Moves** The LS-131 can optionally be commanded to move relative to its current command position. This relieves the user from the additional calculations and bookkeeping otherwise required to implement relative moves. Please refer to the *Command Specification* section below.

**Improved Index Latching** The LS-131 homing function will trigger on any index pulse longer than 120 nanoseconds. Note, however, that the positions are still only updated every 512 microseconds, and that the most accurate homing will require a motor speed of less than 1 encoder count per 512 microseconds.

## **Coordinated motion control**

LS-131 contains a path point buffer with room for 96 entries. Each entry is a goal position for the motor. When the *Servo Drive* enters its special path mode, it will automatically move from one point to the next at a user selectable rate of either 30 or 60 Hz\*. The Servo Drive moves the motor between goal points at a constant velocity such that it always arrives at the next path point in exactly 1/30<sup>th</sup> or 1/60<sup>th</sup> of a second. When sets of path points are downloaded into multiple controllers, and then the paths started simultaneously, the individual axes will execute their paths with exact\*\* synchronization. The path point buffer has room for about 3 seconds worth of motion for a 30 Hz path and about 1.5 seconds for a 60 Hz path. Typically, the host computer downloads the first part of a path to the LS-131 buffers and then starts the path mode. As the buffers becomes depleted, additional path points are dynamically added while the axes are still in motion, until the path is complete. The timing requirements for the host require that it be able to dynamically download new path points before the path point buffers empties completely. With a path point buffer size of 1.5 or 3 seconds, even a non-real time host, such as a PC running Windows, can easily keep up with the task of re-filling the path point buffers as needed.

The actual multi-axis paths, which are downloaded into the LS-131 path point buffers, are calculated by the host computer. In addition to creating the geometry desired (arcs, lines, etc.), the path should be smooth, adhering to the physical acceleration and velocity limits of the motors being controlled. Because the host computer actually creates the paths, any path the user can create can be executed, and paths can involve up to 31 axes. Most typically, coordinated straight-line motions, 2-axis circular motions, or S-curve profiling motions are created.

Note that motions created with the path mode are independent of any acceleration or velocity values loaded using the Load Trajectory command.

## **Path Accuracy**

The path accuracy of the LS-131 Servo Drive is more than adequate for most CNC machine control or robot control applications. For very high speed or very high accuracy applications, however, there are two types of path errors to consider: absolute path errors and timing errors.

---

\* In "fast path" mode, the path rates can be selected as either 60 or 120 Hz. The default "slow path" mode is more than adequate for most applications, and requires less communications overhead.

\*\* The exactness of the synchronization is subject to crystal frequency accuracy and other timing factors discussed later.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Absolute Path Errors

Absolute path accuracy is the accuracy with which a series of calculated path points with straight line segments between them matches the actual curved path desired. For example, a circle, which is approximated by only 5 path points, will form a pentagon rather than a circle. The maximum error between the side of the pentagon and the circle may be quite large. A larger number of path points will produce a smaller error. In general, accuracy of an approximated path will be a function of the number of path points used, and the radius of the curve.

Because LS-131 uses a fixed number of points per second, moving more slowly will result in a more accurate path than moving quickly. Also, a 60 Hz path will be more accurate than a 30 Hz path. The main advantages of using a slower path, however, are that fewer path points need to be calculated, less data needs to be sent to the controllers, and the path point buffer will last twice as long.

The maximum absolute path error can be approximated by the formula:

$$\text{Error} = R \times ( 1 - \cos( V / ( 2 \times F \times R ) ) )^*$$

where **R** is the radius of the curve (in inches), **V** is the velocity of the motion (in inches/sec), and **F** is the path point frequency (30, 60 or 120 Hz). For example, a one-inch diameter circle with a velocity of 1 inch per second and a path frequency of 30 Hz would have a maximum error of 0.00028 inches. If a frequency of 60 Hz is used, the maximum error drops to 0.000069 inches.

## Timing Errors

If the timing of multiple axes is not perfectly synchronized, there will be a deviation from the desired path from the fact that one axis will be ahead or behind in time. The exact deviation will depend on the path geometry.

The first type of timing error results from multiple axes not starting at exactly the same time. When a "start path" command is issued to a group of controllers, they will all start within +/- 0.00025 seconds of one another.

The second type of timing error results from inaccuracies in the frequencies of the oscillators running on each *LS-131* controller. (If all Servo Drives are timed from the same oscillator, this error is zero). Typical oscillator variations (for the same operating temperature) are about 10 parts per million. Therefore, after running a path for 10 seconds, for example, the timing error would be about +/- 0.0001 seconds.

By adding both of these timing errors together, and then multiplying by the path velocity, we get the total distance that one axis can be ahead of another axis. For a 10 second motion, while moving at 1 inch per second, we could have one axis moving ahead of another by at most 0.00035 inches. The actual worst case deviation (moving along a 45 degree angle) will produce an error from the ideal path of 0.00025 inches. Over a total distance of 10 inches traveled, this gives a basic accuracy of ±0.000025 inches per inch of travel. Other examples, of course, will produce different accuracy figures.

Note that errors due to timing only accumulate during a coordinated motion and are, in essence, reset with each new move. Therefore, if errors due to timing do become a problem, the paths should be broken up into shorter moves.

\* *The cosine function should be executed for an angle in radians.*

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## COMMAND SPECIFICATION

### List of Commands

Command	CM D Code	# Data bytes	Description	While Moving?
Reset position	0x0	0-1	Sets position counter to zero.	No
Set address	0x1	2	Sets the individual and group addresses	Yes
Define status	0x2	1	Defines which data should be sent in every status packet	Yes
Read status	0x3	1	Causes particular status data to be returned just once	Yes
Load trajectory	0x4	1-14	Loads motion trajectory parameters	Maybe*
Start motion	0x5	0	Executes the previously loaded trajectory	Maybe**
Set gain	0x6	14	Sets the PID gains and operating limits	Yes
Stop motor	0x7	1	Stops the motor in one of three manners	Yes
I/O control	0x8	1	Not used	
Set home mode	0x9	1	Sets conditions for capturing the home position	Yes
Set baud rate	0xA	1	Sets the baud rate (group command only)	Yes
Clear bits	0xB	0	Clears the sticky status bits	Yes
Save as home	0xC	0	Saves the current position in the home position register	Yes
Add path points	0xD	0-14	Downloads path points to the internal buffer or starts path point mode motion	Yes
Nop	0xE	0	Simply causes the defined status data to be returned	Yes
Hard reset	0xF	0	Resets the controller to its power-up state.	Yes

\*Only allowed while moving if the "start motion now" bit of the trajectory control word is not set or if the "profile mode" bit is set for velocity mode.

\*\*Only allowed while moving if the previously loaded trajectory has the "profile mode" bit set for velocity mode.

### Command Description

#### Reset Position

Command value: 0x0

Number of data bytes: 0 or 1

Command byte: 0x00 or 0x10

Data bytes:

1. Control byte:

Bit 0: resets current position relative to home position

1-7 not used (clear to 0)

#### Description:

Resets the 32-bit encoder counter. If bit 0 in the control byte is set, current position will be set to the difference between old current position and the home position. Otherwise, new current position will be zero. Do not issue this command while executing a trapezoidal profile motion.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Set Address

- Command value: 0x1  
Number of data bytes: 2  
Command byte: 0x21  
Data bytes:
1. Individual address: 0x01-0x7F (initial address 0x00)
  2. Group Address: 0x80-0xFF (initial value 0xFF)

## Description:

Sets the individual address and group address. Group addresses are always interpreted as being between 0x80 and 0xFF. If a Drive is to be a group leader, clear bit 7 of the desired group address in the second data byte. The module will automatically set bit 7 internally after flagging the Drive as a group leader. (If bit 7 of the second data byte is set, the module will default to being a group member.) The first time this command is issued after power-up or reset, it will also enable communications for the next Drive in the network chain by lowering the it's "A out" signal.

## Define Status

- Command value: 0x2  
Number of data bytes: 1  
Command byte: 0x12  
Data bytes:
1. Status items: (default: 0x00)
- |     |    |  |
|-----|----|--|
| Bit | 0: | send position (4 bytes)  |
|     | 1: | send A/D value (1 byte)  |
|     | 2: | send actual velocity (2 bytes - no fractional component)   |
|     | 3: | send auxiliary status byte (1 byte)  |
|     | 4: | send home position (4 bytes)   |
|     | 5: | send device ID and version number (2 bytes)<br>(motor controller device ID = 0, version number = 40 to 49) |
|     | 6: | send current position error (2 bytes)  |
|     | 7: | send number of points in the path buffer*  |

## Description:

Defines what additional data will be sent in the status packet along with the status byte. Setting bits in the command's data byte will cause the corresponding additional data bytes to be sent after the status byte. The status data will always be sent in the order listed. For example if bits 0 and 3 are set, the status packet will consist of the status byte followed by four bytes of position data, followed by the aux. status byte, followed by the checksum. The status packet returned in response to this command will include the additional data bytes specified. On power-up or reset, the default status packet will include only the status byte and the checksum byte.

Note: The actual velocity is a positive number when moving in reverse direction and a negative number when moving in forward direction.

\* In advanced mode only.



# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

Bit 4 of the control byte specifies whether the position servo should be used or if the PWM mode should be entered. Bit 5 specifies whether a trapezoidal profile motion should be initiated or if the velocity profiler is used. Trapezoidal profile motions should only be initialized when the motor velocity is 0. (Bit 0 of the status byte indicates when a trapezoidal profile motion has been completed, or in velocity mode, when the command velocity has been reached.) Bit 6 indicates the velocity or PWM direction. In trapezoidal profile mode, this bit indicates whether position data is absolute (if bit 6 = 0) or relative to the current position. This feature is available in advanced mode only. If bit 7 is set, the command will be executed immediately. If bit 7 is clear, the command data will be buffered and it will be executed when the *Start Motion* command is issued. For example to load only new position data and acceleration data but not to start the motion yet, the command byte would be 0x94, the control byte would be 0x15, followed by 4 bytes of position data (least significant byte first), followed by 4 bytes of acceleration data.

If in the middle of a trapezoidal position move, a new *Load Trajectory* command is issued with new position data downloaded, new position data will be used as a relative offset to modify the goal position. For example, if in the middle of a move to position 50,000, a new *Load Trajectory* command with new position data of 10,000 is loaded, the motor will stop at final position of 60,000. The relative offset can be either positive or negative. The new *Load Trajectory* command must be issued while the motor is running at a constant velocity – issuing the command while accelerating or decelerating will cause a position error to occur. If more than one *Load Trajectory* is issued before the end of move, the goal position will be modified by the sum of relative offsets.

## Start Motion

Command value: 0x5

Number of data bytes: 0

Command byte: 0x05

### Description:

Causes the trajectory information loaded with the most recent Load Trajectory command to execute. This is useful for loading several Drives with trajectory information and then starting them simultaneously with a group command.

## Set Gain

Command value: 0x6

Number of data bytes: 14

Command byte: 0xE6

### Data bytes:

- 1,2. Position gain KP (0 - 0x7FFF)
- 3,4. Velocity gain KD (0 - 0x7FFF)
- 5,6. Integral gain KI (0 - 0x7FFF)
- 7,8. Integration limit IL (0 - 0x7FFF)
9. Output limit OL (0 - 0xFF) (typically recommended 0xFA)
10. Current limit CL (0 - 0xFF) (only odd values)
- 11,12. Position error limit EL (0 - 0x3FFF)
13. Servo rate divisor SR (1 - 0xFF)
14. Amplifier deadband compensation (0 - 0xFF) (typical value is between 0x03 and 0x05)

### Description:

Sets all parameters and limits governing the behavior of the position servo. KP, KD, KI and IL are PID filter parameters. OL limits the maximal PWM output value to  $0 < \text{PWM} \leq \text{OL}$  in position servo modes. In PWM mode OL is ignored. CL is used for motor current limitation (refer to *Motor current monitoring* in *Safety Features* for detailed information). Setting CL=0 effectively disables current limiting. The position error limit (EL) will cause the position servo to be disabled should the position error grow beyond the limit. The servo rate divisor sets the servo tick time to be a multiple of 0.512 msec (1.953 KHz). For example SR=3 gives a servo rate of 651 Hz. The servo tick rate is also used as the profiling time base, although command processing and current limiting are

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

always performed at the maximum tick rate. Sometimes it is necessary to compensate the deadband region around zero PWM output exhibited by some amplifier/motor combinations. The deadband compensation value will be added to the magnitude of the PWM output to force the amplifier into its active region.

## Stop Motor

Command value: 0x7  
Number of data bytes: 1 or 5  
Command byte: 0x17 or 0x57  
Data bytes:

### 1. Stop control byte

Bit	0:	Pic_ae (Power Driver enable)
	1:	Turn motor off
	2:	Stop abruptly
	3:	Stop smoothly
	4:	Stop here
	5:	Enable advanced features
	6-7:	Unused (set to 0)

2-5. Stopping position (only required if bit 4 above is set)

### Description:

Stops the motor in the specified manner. If bit 0 of the Stop Control Byte is set, Power Driver will be enabled. If bit 0 is cleared Power Driver will be disabled, regardless of the state of the other bits. Pic\_ae also controls the meaning of bit 3 (Power\_on), bit 5 (Limit1 (Reverse)), and bit 6 (Limit 2 (Forward)) of status byte (refer to *Status Bits of Safety Features* section in this document). If bit 1 is set, the position servo will be disabled, the PWM output value will be set to 0, and bits 2, 3 and 4 are ignored. If bit 2 is set, the current command velocity and the goal velocity will be set to 0, the position servo will be enabled, and velocity mode will be entered. If the velocity servo was previously disabled, the motor will simply start servoing to its current position. If the motor was previously moving in one of the profiling modes, it will stop moving abruptly and servo to its current position. This stopping mode should only be used as an emergency stop where the motor position needs to be maintained. Setting bit 3 enters a more graceful stop mode - this sets the goal velocity to 0 and enters velocity mode, causing the motor to decelerate to a stop at the current acceleration rate. If bit 4 is set, the motor will move to the specified stopping position abruptly with no profiling. This mode can be used to cause the motor to track a continuous string of command positions. Note that if the stopping position is too far from the current position, a position error will be generated. Only one of the bits 1, 2, 3 or 4 should be set at the same time. The *Stop Motor* command must be issued initially to set Pic\_ae before other motion commands are issued.

Bit 5 enables advanced features of the LS-131. Advanced features will stay enabled regardless of subsequent stop commands, until the drive is reset.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## I/O Control

Command value: 0x8  
Number of data bytes: 1  
Command byte: 0x18  
Data bytes:  
1. I/O control byte  
Bit 0-3: Reserved set to 1  
4-5: Unused (set to 0)  
6: Fast path mode (0 = 30/60 Hz, 1 = 60/120 Hz)  
7: Unused (set to 0)

### Description:

Bit 6 controls whether the drive is in slow path mode (bit 6 = 0) or fast path mode when the drive is in advanced mode.

## Set Homing Mode

Command value: 0x9  
Number of data bytes: 1  
Command byte: 0x19  
Data bytes:  
1. Homing control byte  
Bit 0: Capture home position on change of Limit 1 (Reverse)  
1: Capture home position on change of Limit 2 (Forward)  
2: Turn motor off on home  
3: Capture home on change of Index  
4: Stop abruptly on home  
5: Stop smoothly on home  
6: Capture home position when an excess position error occurs  
7: Capture home position when current limiting occurs

### Description:

Causes the Drive to monitor the specified conditions and capture the home position when any of the flagged conditions occur. The home\_in\_progress bit in the status byte is set when this command is issued and it is then lowered the home position has been found. Setting one (and only one) of bits 2, 4 or 5 will cause the motor to stop automatically in the specified manner once the home condition has been triggered. This feature can also be used as a safety shutoff.

Note: For homing with Index signal, use low velocities, which ensure the time of the Index pulse is at least one servo tick (0.512 msec). The maximum theoretical homing velocity is 65536 (one encoder count per servo tick). Depending of motor vibrations, the homing velocity should be less than 65536. A recommended homing velocity is 16384 (0.25 encoder counts per servo tick).

## Set Baud Rate

Command value:	0xA	<b>sample values:</b>	
Number of data bytes: 1		9600	BRD = 0x81
Command byte:	0x1A	19200	BRD = 0x3F
Data bytes:		57600	BRD = 0x14
1. Baud rate divisor, BRD		115200	BRD = 0x0A

### Description:

Sets the communication baud rate. All drives on the network must have their baud rates changed at the same time; therefore this command should only be issued to a group including all of the controllers on the network. A status packet returned from this command would be at the new baud rate, so typically (unless the host's baud rate can be accurately synchronized) there should be no group leader when this command is issued.

## Clear Sticky Bits

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

Command value: 0xB  
Number of data bytes: 0  
Command byte: 0x0B

## Description:

The overcurrent and position error bits in the status byte and the position wrap and servo timer overrun bits in the auxiliary status byte will stay set unless cleared explicitly with this command.

## **Save Current Position as Home**

Command value: 0xC  
Number of data bytes: 0  
Command byte: 0x0C

## Description:

Causes the current position to be saved as the home position. This command is typically issued to a group of controllers to cause their current positions to be stored synchronously. The stored positions can then be read individually by reading the home position

## **Add path points**

Command value: 0xD  
Number of data bytes:  $n = 0, 2, 4, 6, 8, 10, 12$  or 14  
Command byte: 0xnD  
Data bytes:  
1, 2: Incremental data for path point 1 ( $n \geq 2$ )  
3, 4: Incremental data for path point 2 ( $n \geq 4$ )  
...  
13, 14: Incremental data for path point 7 ( $n = 0xE$ )  
or none Starts execution of path point mode ( $n = 0$ )

## Description:

The Add Path Points command allow the user to add path points to the LS-131 internal path point buffer. Up to 7 path points may be added at with a single command, and multiple commands may be issued to load a total of 96 path points (Bit 7 of the Read Status or the Define Status control byte can be used to have the number of path points in the buffer returned in the status packet). Path point data is specified as a 16-bit integer, with 14 of those bits specifying the *absolute distance from the previous path point to the current path point*\*. The additional 2 bits are used to specify: 1) the direction of the incremental position data (*i.e.*, whether the path point is in front of or behind the previous point), and 2) if it should take 1/30<sup>th</sup> second or 1/60<sup>th</sup> second to get to the path point from the previous path point. Normally, just one timing mode is used in a path, but the timing can be mixed. The data format for each pair of data bytes is as follows:

30 Hz Path: P<sub>13</sub> P<sub>12</sub> P<sub>11</sub> P<sub>10</sub> P<sub>9</sub> P<sub>8</sub> P<sub>7</sub> P<sub>6</sub> P<sub>5</sub> P<sub>4</sub> P<sub>3</sub> P<sub>2</sub> P<sub>1</sub> P<sub>0</sub> F D  
most significant byte least significant byte

60 Hz Path: P<sub>12</sub> P<sub>11</sub> P<sub>10</sub> P<sub>9</sub> P<sub>8</sub> P<sub>7</sub> P<sub>6</sub> P<sub>5</sub> P<sub>4</sub> P<sub>3</sub> P<sub>2</sub> P<sub>1</sub> P<sub>0</sub> 0 F D  
most significant byte least significant byte

where: P<sub>0</sub> - P<sub>13</sub> are the 14 bits of incremental position data, F is the path frequency (0 = 60 Hz, 1 = 30 Hz) and D is the direction (0 = forward, 1 = reverse). Note that for a 60 Hz path, the position data bits are shifted to the left, and bit 2 is always zero. As with all other types of multi-byte data, the least significant byte is always sent first.

\* By using incremental position data rather than absolute position data, the amount of path data, which will fit in the LS-131 buffer is doubled.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

To actually start execution of the path in the path point buffer, an Add Path Points command is issued with no path point data included. To start several LS-131 controllers simultaneously, the Add Path Points command (with no path point data) should be sent to the group address of the group containing all the LS-131 controllers involved.

If "fast path" mode has been selected using the I/O Control command, bit F will be set to 0 for 120 Hz or 1 for 60 Hz, and the path point data will have the following format:

60 Hz Path (fast path mode): P<sub>12</sub> P<sub>11</sub> P<sub>10</sub> P<sub>9</sub> P<sub>8</sub> P<sub>7</sub> P<sub>6</sub> P<sub>5</sub> P<sub>4</sub> P<sub>3</sub> P<sub>2</sub> P<sub>1</sub> P<sub>0</sub> 0 F D  
*most significant byte* *least significant byte*

120 Hz Path (fast path mode): P<sub>11</sub> P<sub>10</sub> P<sub>9</sub> P<sub>8</sub> P<sub>7</sub> P<sub>6</sub> P<sub>5</sub> P<sub>4</sub> P<sub>3</sub> P<sub>2</sub> P<sub>1</sub> P<sub>0</sub> 0 0 F D  
*most significant byte* *least significant byte*

## No Operation

Command value: 0xE  
Number of data bytes: 0  
Command byte: 0x0E

### Description:

Does nothing except cause a status packet with the currently defined status data to be returned.

## Hard Reset

Command value: 0xF  
Number of data bytes: 0  
Command byte: 0x0F

### Description:

Resets the control module to its power-up state. No status will be returned. Typically, this command is issued to all the modules on the network, although if the baud rate is set at the default, it is possible to reset and re-initialize the addresses of a contiguous sub-chain of modules.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## STATUS BYTE AND AUXILIARY STATUS BYTE DEFINITIONS

### Status Byte

<u>Bit</u>	<u>Name</u>	<u>Definition</u>
0	Move_done	Clear when in the middle of a trapezoidal profile move or in velocity mode, when accelerating from one velocity to the next. This bit is set otherwise, including while the position servo is disabled
1	Cksum_error	Set if there was a checksum error in the just received command packet
2	Current_limit	Set if current limiting has exceeded (refer to <i>Motor Current Monitoring</i> section in this document). Must be cleared by user with <i>Clear Sticky Bits</i> command
3	Power_on/diag. bit	Refer to <i>Status Bits and LED</i> section in this document
4	Pos_error	Set if the position error has exceeded the position error limit. It is also set whenever the position servo is disabled (Power_on=0). Must be cleared by user with <i>Clear Sticky Bits</i> command
5	Limit 1 (Reverse)/diag. bit	Reverse Limit or diagnostic bit (refer to <i>Status Bits and LED</i> section in this document).
6	Limit 2 (Forward)/diag. bit	Forward Limit or diagnostic bit (refer to <i>Status Bits and LED</i> section in this document).
7	Home_in_progress	Set while searching for a home position. Reset to zero once the home position has been captured

### Auxiliary Status Byte

<u>Bit</u>	<u>Name</u>	<u>Definition</u>
0	Index/diag. bit	Compliment of the value of the index input or diagnostic bit (refer to <i>Status Bits and LED</i> section in this document).
1	Pos_wrap	Set if the 32-bit position counter wraps around. Must be cleared with the <i>Clear Sticky Bits</i> command
2	Servo_on	Set if the position servo is enabled, clear otherwise
3	Accel_done	Set when the initial acceleration phase of a trapezoidal profile move is completed. Cleared when the next move is started
4	Slew_done	Set when the slew portion of a trapezoidal profile move is complete. Cleared when the next move is started
5	Servo_overrun	At the highest baud rate and servo rate, certain combinations of calculations may cause the servo, profiling, and command processing to take longer than 0.512 msec, in which case, this bit will be set. This is typically not serious, only periodically introducing a small fraction of a millisecond delay to the servo tick time. Cleared with the <i>Clear Sticky Bits</i> command
6	Path mode	Set when the drive is currently executing a path. Cleared when buffer is emptied or Stop Motor or Load Trajectory command is sent.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## INITIALIZING PROCEDURE AND PROGRAMMING EXAMPLES FOR SERVO DRIVES

To ensure a proper operation of all Servo drives connected to the network, the following initializing steps should be executed:

1. Reset all modules with *Hard Reset* command.
2. Set the addresses for all connected drives.
3. Set the individual gains (KP, KD, KI, IL, OL, CL, EL, SR and DB). Minimal requirements are: KP <> 0, EL <> 0 and SR <> 0.
4. Use *Load trajectory* command to set the target position, velocity acceleration with start motion now in trapezoidal mode. Minimal requirements are acceleration <> 0 and target position = 0. This command does not start any motion. It is necessary to initialize internal registers of the module.
5. Close the servo loop by using *Stop Motor* command (Pic\_ae=1 and Stop abruptly=1).

### Understanding the Serial Communication with Servo drives

The Serial Communication with Servo drives is strictly master-slave and matches repeatedly two elements:

- Sending a command to the specified drive's address;
- Receiving answer to the sent command – Status Byte(s).

**Note:** During the communication all bytes are sent with LSB first.

### Commands

There are 16 commands managing Servo drives (refer to Command Description). Each command as shown in the following two tables includes header, address, command, data bytes and one checksum byte. Checksum does not include header byte.

#### Structure of *Read Status* command

Byte 1	Byte 2	Byte 3		Byte 4	Byte 5
Header	Address (Individual or Group)	Command Code		Data Byte	CheckSum = Byte 2 + Byte 3 + Data Byte
		High 4 bits No. of data bytes	Low 4 bits command code		
AA	01	1	3	01	15

#### Examples

Cmd. Bytes	Byte 1	Byte 2	Byte 3	Byte 4 – N	Byte N+1
Command	Header	Address	Cmd. Code	Data Byte(s)	Checksum
Reset position	AA	01	0 0		01
Define status	AA	05	1 2	05	1C
Set address	AA	01	2 1	07 FF	21
Load trajectory	AA	01	5 4	91 00 28 00 00	0E
Set gain	AA	01	E 6	64 00 00 04 00 00 00 00 FF 00 00 08 01 00	57

### Status Data

The structure of the returned status information depends on *Define Status* or *Read Status* commands (refer to Command Description). By default only the Status byte and Checksum are returned to the host.

#### Examples

Byte 1	Optional Bytes 0-16	CheckSum
Status Byte	Additional Status Bytes as position, velocity, home position, A/D auxiliary byte, version and position error.	CheckSum = Byte 1+ Optional Bytes
09	no additional status bytes requested	09
09	00 28 00 00 – four additional status bytes	31

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Addressing

Each drive in the daisy-chained network has two addresses:

- Individual - for individual control of each drive. Its range is from 01h to 7Fh.
- Group - for simultaneous control of all group members by sending a single command to their group address. It is in the range of 80h to FFh.

Both these addresses have to be set during the initialization process.

The group may have Group leader responsible to send status data. Its address is:

Group leader address = Group address - 80h.

If there is no group leader - no status data will be send after a group command.

*Set Baud Rate* command must be sent only as a group command with no group leader, otherwise communication problems may occur.

## Set Address command format

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
Header	Preset Address	Command code	Individual Address	Group Address	Checksum
AA	00	21	01	FF	21

## Setting the Addresses

After power-up and *Hard Reset* command all drives have their address set to 00h and only the first drive (starting from the host) has its communication enabled. Consecutive *Set Address* commands are sent to address 00h until all drives are addressed. This procedure can be executed once after *Hard Reset*. The table below shows the steps to address 3-drives network.

## Example of sequential addressing for three Servo drives


Step	Command	Set address Hexadecimal Code	Drive 1		Drive 2		Drive 3	
			Individual address	Group address	Individual address	Group address	Individual address	Group address
0	Power-up							
1	Hard Reset	AA FF 0F 0E	address=00 communication <i>enabled</i>		address=00 communication <i>disabled</i>		address=00 communication <i>disabled</i>	
2	Set Address Drive1 = 01	AA 00 21 01 FF 21	01	FF	address=00 communication <i>enabled</i>		address=00 communication <i>disabled</i>	
3	Set Address Drive2 = 02	AA 00 21 02 FF 22	01	FF	02	FF	address=00 communication <i>enabled</i>	
4	Set Address Drive3 = 03	AA 00 21 03 FF 23	01	FF	02	FF	03	FF

**Note:** Before start addressing *Hard Reset* command must be issued.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

The flowchart shows the addressing procedure of N drives network. There is no group leader and the group address is FF.

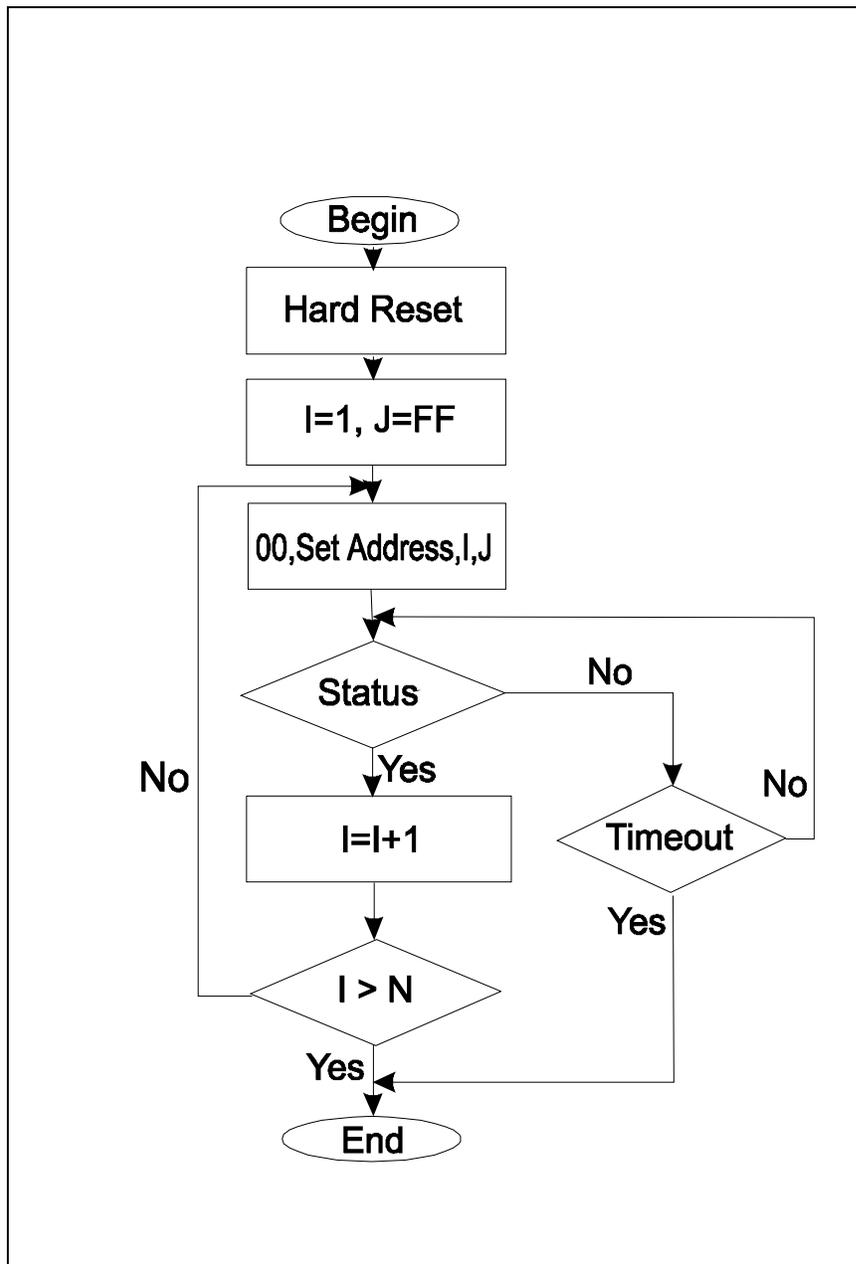

*I* - Individual Address; *J* - Group Address = FF;  
*Status* - Status Data sent to the Host; *Timeout* - Greater than one servo circle.

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Examples of Managing Two Servo Drives

- # 1 – Resets all modules with group command.
- # 2 and # 3 - Set the addresses of drives 1 and 2.
- # 4 and # 6 - Set PID parameters of drives 1 and 2.
- # 6 and # 7 - Starts motion in trapezoidal mode with target position=0, velocity=0, acceleration=1 and PWM=0.
- # 8 and # 9 - Close servo loops of drives 1 and 2. Initialization is complete at this point.
- # 10 and # 10 - Load trajectories (positions, velocities and accelerations) for drives 1 and 2.
- # 12 and # 13 - Load and execute new trajectory for drive 1.
- # 14 and # 15 - Read additional status bytes from drives 1 and 2.
- # 16, # 17 and #18 - Load new trajectories for drives 1 and 2 and execute them with one command sent to the drives' group address.

## Examples

#	Hexadecimal code of command	Comments
1	AA FF 0F 0E	<i>Hard Reset</i>
2	AA 00 21 01 FF 21	<i>Set Address 01h for drive 1. Group address=FFh.</i>
3	AA 00 21 02 FF 22	<i>Set Address 02h for drive 2. Group address=FFh.</i>
4	AA 01 E6 64 00 00 04 00 00 00 00 FF 00 00 08 01 00 57	<i>Set Gains of drive 1 – defines PID parameters: KP=64h, KI=400h, KI=00h, IL=00h, OL=FFh, CL=00h, EL=800h, SR=01h, DC=00h.</i>
5	AA 02 E6 64 00 00 04 00 00 00 00 FF 00 00 08 01 00 58	<i>Set Gains of drive 2 – defines PID parameters: KP=64h, KI=400h, KI=00h, IL=00h, OL=FFh, CL=00h, EL=800h, SR=01h, DC=00h.</i>
6	AA 01 E4 9F 00 00 00 00 00 00 00 00 01 00 00 00 00 85	<i>Load trajectory for drive 1 – target position=0, velocity=0, acceleration=1, PWM=0 and start motion now</i>
7	AA 02 E4 9F 00 00 00 00 00 00 00 00 01 00 00 00 00 86	<i>Load trajectory for drive 2 – target position=0, velocity=0, acceleration=1, PWM=0 and start motion now</i>
8	AA 01 17 05 1D	<i>Stop Motor - closes servo loop of drive 1 with Power Driver enable and Stop Abruptly in Command byte.</i>
9	AA 02 17 05 1E	<i>Stop Motor - closes servo loop of drive 2 with Power Driver enable and Stop Abruptly in Command byte.</i>
10	AA 01 E4 9F 00 00 00 00 00 80 01 00 64 00 00 00 00 69	<i>Load Trajectory of drive 1 with Pos=0000h, Vel=18000h, Acc=6400h, PWM=00h, servo mode=1.</i>
11	AA 02 E4 9F 00 00 00 00 00 80 01 00 64 00 00 00 00 6A	<i>Load Trajectory of drive 2 with Pos=0000h, Vel=18000h, Acc=6400h, PWM=00h, servo mode=1.</i>
12	AA 01 54 11 00 28 00 00 8E	<i>Load Trajectory of drive 1 with new position=2800h.</i>
13	AA 01 05 06	<i>Start Motion - executes previously loaded trajectory.</i>
14	AA 01 13 05 19	<i>Read Status from drive 1 (plus position and velocity).</i>
15	AA 02 13 05 1A	<i>Read Status from drive 2 (plus position and velocity).</i>
16	AA 01 54 11 20 4E 00 00 D4	<i>Load Trajectory of drive 1 with new position=4E20h.</i>
17	AA 02 54 11 E0 B1 FF FF F6	<i>Load Trajectory of drive 2 with new position=FFFFB1E0h (-4E20h).</i>
18	AA FF 05 04	<i>Start Motion – executes previously loaded trajectories. The command is sent to the drives' group address FFh.</i>

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Procedure Initialize

AA FF 0F 0E	Hard reset
AA 00 21 01 FF 21	Set address
AA 00 21 02 FF 22	Search for more modules until no response received
AA 01 13 20 34	Read Device ID and Version number
AA 01 13 FF 13	Read all status data
AA 01 E6 64 00 00 04 00 00 00 00 FF 00 00 08 01 00 57	Set Gain parameters
AA 01 E4 9F 00 00 00 00 00 00 00 00 01 00 00 00 00 85	Set Trajectory parameters
AA 01 17 05 1D	Close servo loop

## Procedure FindHomePosition

AA 01 E6 C8 00 20 03 46 00 28 00 FF 00 40 1F 01 00 9F	Set gain parameters: KP=200, KD=800, KI=70, IL=40, Output limit=255, current limit =0, Position error limit=8000, Servo rate divisor=1 amplifier deadband compensation=0
AA 01 17 09 21	Close the servo loop (Stop smoothly and amplifier enable)
AA 01 94 37 25 06 01 00 58 01 00 00 51	Load trajectory: Velocity mode, Forward direction, Velocity=1 round per second (67109 programmed velocity for 500 line encoder), Acceleration = 10 round per second <sup>2</sup> (344 programmed acceleration for 500 line encoder)
AA 01 19 12 2C	Set home mode - capture home position on change of Limit 1 and stop abruptly
AA 01 05 06	Start motion
wait while home_in_progress bit=1	Home position is found on change of Limit 2
AA 01 19 18 32	Set home mode - capture home position on change of Index and stop abruptly
AA 01 94 77 25 06 01 00 58 01 00 00 91	Load trajectory: Velocity mode, Reverse direction
AA 01 05 06	Start motion
wait while home_in_progress bit=1	Home position is found on change of Index

Calculation of programmed velocity and acceleration for servo rate divisor = 1:

Vel = (encoder counts per revolution) x (number of revolutions per second) x 33.554432

Acc = (encoder counts per revolution) x (number of revolutions per second<sup>2</sup>) x 0.017179869184

For this example:

Vel	= 2000 x 1	x 33.554432	= 67109	= 00010625h
Acc	= 2000 x 10	x 0.017179869184	= 344	= 00000158h

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

## Path Mode Example

The table below shows all the data for a smooth trapezoidal path for a single motor moving a carriage from a position of 0.0 to 2.0 inches. A path frequency of 30 Hz is used. (The path point numbers in boldface indicate the periods of acceleration or deceleration.) The last two columns of the table contain (in hex format) the exact position data with the frequency and direction bits set. Assuming that the address for the corresponding motor controller is 0x01, the command string to download the first seven path points would be as follows:

0xAA		Header byte
0x01		Address byte
0xED		Add Path Point Command byte (14 bytes of data)
0x5A	0x00	Path point 1
0xB6	0x00	Path point 2
0x0A	0x01	Path point 3
0x66	0x01	Path point 4
0xBE	0x01	Path point 5
0x1A	0x02	Path point 6
0x6E	0x02	Path point 7
0xBB		8-bit Checksum (does not include header)

Note that less than 7 path points can be added, as long as the upper nibble of the command byte, indicating the number of additional data bytes, is adjusted accordingly. After several path points have been added, you can actually start the path execution by issuing the command string:

0xAA		Header byte
0x01		Address byte
0x0D		Add Path Point Command byte (no additional data)
0x0E		8-bit Checksum (does not include header)

The path will continue to execute as long as new path points are added before the *Servo Drive* reaches the last point added.

## Path Mode Example: Single Axis Trapezoidal Motion

Path Length (inches)	2.00
Encoder counts per inch	10000.00
Maximum Velocity (in/sec)	1.00
Acceleration (in/sec/sec)	2.00
Path Frequency (Hz)	30.00
Tick Time	0.033
Maximum Velocity (counts/tick)	333.333
Acceleration (counts/tick/tick)	22.22
Starting Position (counts)	0.00
Goal Position (counts)	20000.00

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

<i>Path Point</i>	<i>Current Velocity (counts/tick)</i>	<i>Position (counts)</i>	<i>Integer Position (counts)</i>	<i>Distance from Prev. Point (counts)</i>	<i>Most Significant Byte (binary)</i>	<i>Least Significant Byte (binary)</i>	<i>Most Significant Byte (hex)</i>	<i>Least Significant Byte (hex)</i>
(start)	0.00	0	0					
<b>1</b>	<b>22.22</b>	22.22	22	22	00000000	01011010	00	5A
<b>2</b>	<b>44.44</b>	66.67	67	45	00000000	10110110	00	B6
<b>3</b>	<b>66.67</b>	133.33	133	66	00000001	00001010	01	0A
<b>4</b>	<b>88.89</b>	222.22	222	89	00000001	01100110	01	66
<b>5</b>	<b>111.11</b>	333.33	333	111	00000001	10111110	01	BE
<b>6</b>	<b>133.33</b>	466.67	467	134	00000010	00011010	02	1A
<b>7</b>	<b>155.56</b>	622.22	622	155	00000010	01101110	02	6E
<b>8</b>	<b>177.78</b>	800.00	800	178	00000010	11001010	02	CA
<b>9</b>	<b>200.00</b>	1000.00	1000	200	00000011	00100010	03	22
<b>10</b>	<b>222.22</b>	1222.22	1222	222	00000011	01111010	03	7A
<b>11</b>	<b>244.44</b>	1466.67	1467	245	00000011	11010110	03	D6
<b>12</b>	<b>266.67</b>	1733.33	1733	266	00000100	00101010	04	2A
<b>13</b>	<b>288.89</b>	2022.22	2022	289	00000100	10000110	04	86
<b>14</b>	<b>311.11</b>	2333.33	2333	311	00000100	11011110	04	DE
<b>15</b>	<b>333.33</b>	2666.67	2667	334	00000101	00111010	05	3A
16	333.33	3000.00	3000	333	00000101	00110110	05	36
17	333.33	3333.33	3333	333	00000101	00110110	05	36
18	333.33	3666.67	3667	334	00000101	00111010	05	3A
19	333.33	4000.00	4000	333	00000101	00110110	05	36
20	333.33	4333.33	4333	333	00000101	00110110	05	36
21	333.33	4666.67	4667	334	00000101	00111010	05	3A
22	333.33	5000.00	5000	333	00000101	00110110	05	36
23	333.33	5333.33	5333	333	00000101	00110110	05	36
24	333.33	5666.67	5667	334	00000101	00111010	05	3A
25	333.33	6000.00	6000	333	00000101	00110110	05	36
26	333.33	6333.33	6333	333	00000101	00110110	05	36
27	333.33	6666.67	6667	334	00000101	00111010	05	3A
28	333.33	7000.00	7000	333	00000101	00110110	05	36
29	333.33	7333.33	7333	333	00000101	00110110	05	36
30	333.33	7666.67	7667	334	00000101	00111010	05	3A
31	333.33	8000.00	8000	333	00000101	00110110	05	36
32	333.33	8333.33	8333	333	00000101	00110110	05	36
33	333.33	8666.67	8667	334	00000101	00111010	05	3A
34	333.33	9000.00	9000	333	00000101	00110110	05	36
35	333.33	9333.33	9333	333	00000101	00110110	05	36
36	333.33	9666.67	9667	334	00000101	00111010	05	3A
37	333.33	10000.00	10000	333	00000101	00110110	05	36
38	333.33	10333.33	10333	333	00000101	00110110	05	36
39	333.33	10666.67	10667	334	00000101	00111010	05	3A
40	333.33	11000.00	11000	333	00000101	00110110	05	36
41	333.33	11333.33	11333	333	00000101	00110110	05	36
42	333.33	11666.67	11667	334	00000101	00111010	05	3A
43	333.33	12000.00	12000	333	00000101	00110110	05	36

# Logosol Intelligent Servo Drive LS-131

Doc # 712131001 / Rev. F, 10/28/2004

44	333.33	12333.33	12333	333	00000101	00110110	05	36
45	333.33	12666.67	12667	334	00000101	00111010	05	3A
46	333.33	13000.00	13000	333	00000101	00110110	05	36
47	333.33	13333.33	13333	333	00000101	00110110	05	36
48	333.33	13666.67	13667	334	00000101	00111010	05	3A
49	333.33	14000.00	14000	333	00000101	00110110	05	36
50	333.33	14333.33	14333	333	00000101	00110110	05	36
51	333.33	14666.67	14667	334	00000101	00111010	05	3A
52	333.33	15000.00	15000	333	00000101	00110110	05	36
53	333.33	15333.33	15333	333	00000101	00110110	05	36
54	333.33	15666.67	15667	334	00000101	00111010	05	3A
55	333.33	16000.00	16000	333	00000101	00110110	05	36
56	333.33	16333.33	16333	333	00000101	00110110	05	36
57	333.33	16666.67	16667	334	00000101	00111010	05	3A
58	333.33	17000.00	17000	333	00000101	00110110	05	36
59	333.33	17333.33	17333	333	00000101	00110110	05	36
60	333.33	17666.67	17667	334	00000101	00111010	05	3A
61	<b>311.11</b>	17977.78	17978	311	00000100	11011110	04	DE
62	<b>288.89</b>	18266.67	18267	289	00000100	10000110	04	86
63	<b>266.67</b>	18533.33	18533	266	00000100	00101010	04	2A
64	<b>244.44</b>	18777.78	18778	245	00000011	11010110	03	D6
65	<b>222.22</b>	19000.00	19000	222	00000011	01111010	03	7A
66	<b>200.00</b>	19200.00	19200	200	00000011	00100010	03	22
67	<b>177.78</b>	19377.78	19378	178	00000010	11001010	02	CA
68	<b>155.56</b>	19533.33	19533	155	00000010	01101110	02	6E
69	<b>133.33</b>	19666.67	19667	134	00000010	00011010	02	1A
70	<b>111.11</b>	19777.78	19778	111	00000001	10111110	01	BE
71	<b>88.89</b>	19866.67	19867	89	00000001	01100110	01	66
72	<b>66.67</b>	19933.33	19933	66	00000001	00001010	01	0A
73	<b>44.44</b>	19977.78	19978	45	00000000	10110110	00	B6
74	<b>22.22</b>	20000.00	20000	22	00000000	01011010	00	5A
75	<b>0.00</b>	20000.00	20000	0	00000000	00000010	00	02

Data for a Trapezoidal Motion